

TROJAN™

ELITE GYM 1.0


HOME
GYM

COMPLETE BODY
WORKOUT

STRENGTH
& TONING



USER MANUAL

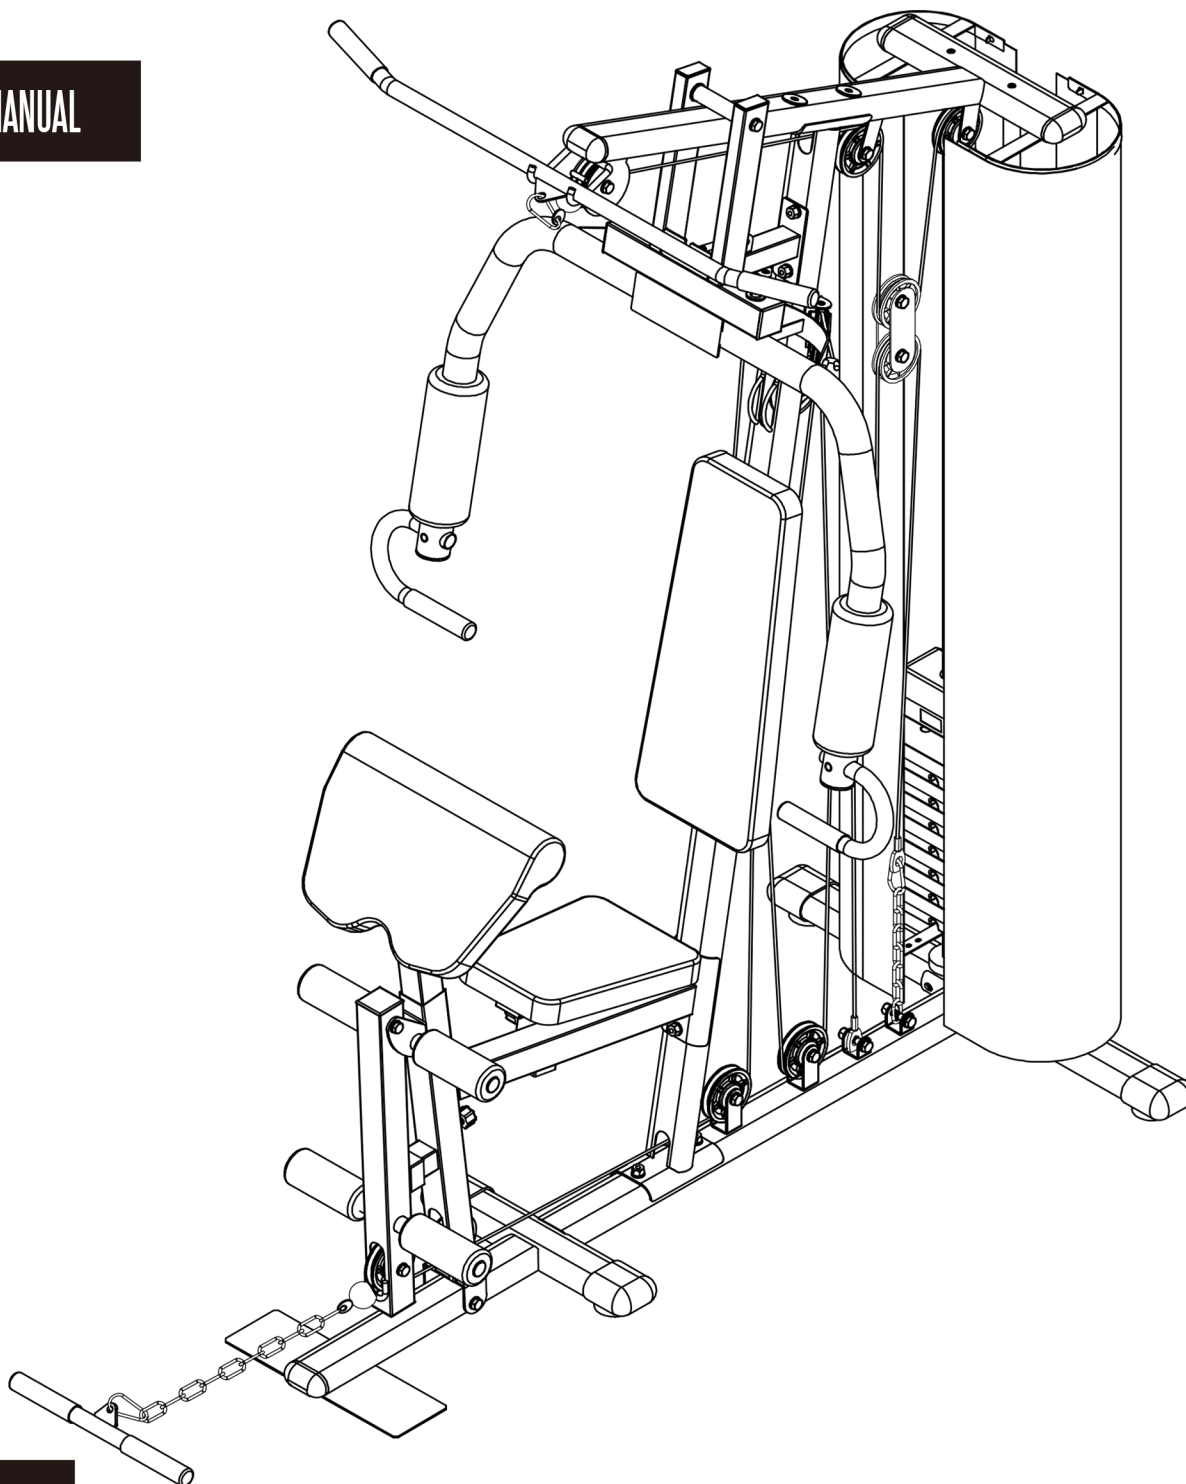

CAUTION

READ ALL PRECAUTIONS AND
INSTRUCTIONS IN THIS MANUAL
BEFORE USING THIS EQUIPMENT.
KEEP THIS MANUAL FOR
FUTURE REFERENCE.

Visit facebook.com/trojanhealth
www.trojanhealth.co.za
www.instagram.com/trojanhealth

INDEX

• Important Safety Instructions	3
• Pre Assembly Check List	5
• Hardware & Tools List	6
• Parts List	9
• Exploded Drawing	11
• Assembly Steps	12
• Fitness Tips & Techniques	22
• Conditioning Guidelines	23
• Warm Up & Cool Down	24
• Maintenance	25
• 2 Year Limited Warranty	26
• Repair Procedure	27

IMPORTANT SAFETY INSTRUCTIONS

It is the sole responsibility of the purchaser of Trojan products to read the owner's manual, warning labels and instruct all individuals, on proper usage of the equipment. Understanding each and every warning to the fullest is important. If any of these instructions or warnings are unclear please contact Trojan Customer Services on **0861 TROJAN (0861 876526)**, within the Republic of South Africa. Customers residing outside South Africa can contact us on +27 10 206 4405.

The equipment is only intended for home use and is not intended for commercial, institutional and/or studio facilities use.

Contact Trojan with any questions regarding this classification. It is recommended that all users of Trojan be informed of the following information prior to use.

HEALTH WARNING

- Before starting any exercise or conditioning program you should consult with your personal physician to see if you require a complete physical exam. This is especially important if you are inactive, pregnant or suffer from any illness.
- If at any time during exercise you feel faint, dizzy or experience pain, stop exercising immediately and consult your physician.
- To avoid muscular pain and strain, begin each workout by stretching and warming up and end each session by cooling down and stretching.

INSTALLATION

Trojan recommends that all equipment:

- Be secured to or set up on a solid, level surface to stabilise and eliminate rocking or tipping over during training.
- Be set up inside your home away from moisture and dust (the equipment is not designed for outdoor use).
- Be set up with sufficient ventilation to ensure proper operation.
- Be set up with sufficient space around the equipment so that all exercises can be completed safely. It is recommended that there should be at least 1 m of space around the equipment where access is required to exercise.

PROPER USAGE

- Do not use the equipment in any way other than as designed or intended by the manufacturer. It is imperative that Trojan equipment is used properly to avoid injury.
- Injuries may result from exercising improperly or excessively.
- Your Trojan equipment should only be used by 1 person at a time.
- Be careful to maintain your balance while using, mounting, dismounting or assembling your Trojan equipment to avoid injury.
- Do not attempt to adjust the seat or handlebars while you are on your Trojan equipment.
- Servicing other than the procedures in this manual should be performed by an authorised service representative only.

ACCESS CONTROL

- Trojan recommends that all fitness equipment be used in a supervised area. It is recommended that the equipment be located in an access controlled area. Control is the responsibility of the owner. Keep children away from all equipment.
- Parents or other supervising adults must provide close supervision of children if the equipment is used in the presence of children.

IMPORTANT SAFETY INSTRUCTIONS

INSPECTION

- Do not use or permit use of any equipment that is damaged, or has worn or broken parts. For all Trojan equipment use only replacement parts supplied by Trojan.
- Always make sure that all nuts and bolts are tightened prior to each use.
- Maintain labels and nameplates – do not remove labels for any reason. They contain important information.
- Equipment maintenance – preventative maintenance is the key to smooth operating equipment. Please ensure that you follow our maintenance tips to ensure the continued correct function of your Trojan equipment.
- Before any use, examine all accessories approved for use with the Trojan equipment for damage or wear.
- Should your Trojan equipment appear damaged or worn, do not attempt to use or repair the equipment yourself.
- Please contact our service department on **0861 TROJAN (0861 876526)** to arrange a repair.
Customers residing outside South Africa can contact us on +27 10 206 4405.

OPERATING WARNINGS

- It is the purchaser's responsibility to instruct all users as to the proper operating procedures of all Trojan equipment.
- Keep children away from all moving parts. Parents must provide close supervision of children if the equipment is used in the presence of children.
- Do not wear loose fitting clothing or jewellery when using the equipment. It is also recommended that users tie up long hair to avoid contact with moving parts.
- Ensure that anyone not using the equipment stays clear of the user, accessories and moving parts while the machine is in operation.

USER WEIGHT LIMITATIONS

- This Trojan Elite Gym 1.0 may not be used by persons weighing more than 120 kg.

SAVE THIS INSTRUCTION MANUAL FOR FUTURE USE AND REFERENCE.

If any of these instructions or warnings are unclear please contact Trojan Customer Services on


0861 TROJAN (0861 876526) within the Republic of South Africa or **visit www.trojanhealth.co.za**.

Customers residing outside South Africa can contact us on +27 10 206 4405.

PRE ASSEMBLY CHECK LIST

Thank you for choosing the Trojan Elite Gym 1.0. We take great pride in producing this product and hope it will provide many hours of quality exercise to make you feel better, look better and enjoy life to its fullest. Yes, it's a proven fact that a regular exercise program can improve your physical and mental health. Too often, our busy lifestyles limit our time and opportunity to exercise. The Trojan Elite Gym 1.0 provides a convenient and simple method to begin your assault on getting your body in shape and achieving a healthier lifestyle. Before reading further, please review the drawing below and familiarise yourself with the parts that are labelled.

Read this manual carefully before using the Trojan Elite Gym 1.0.

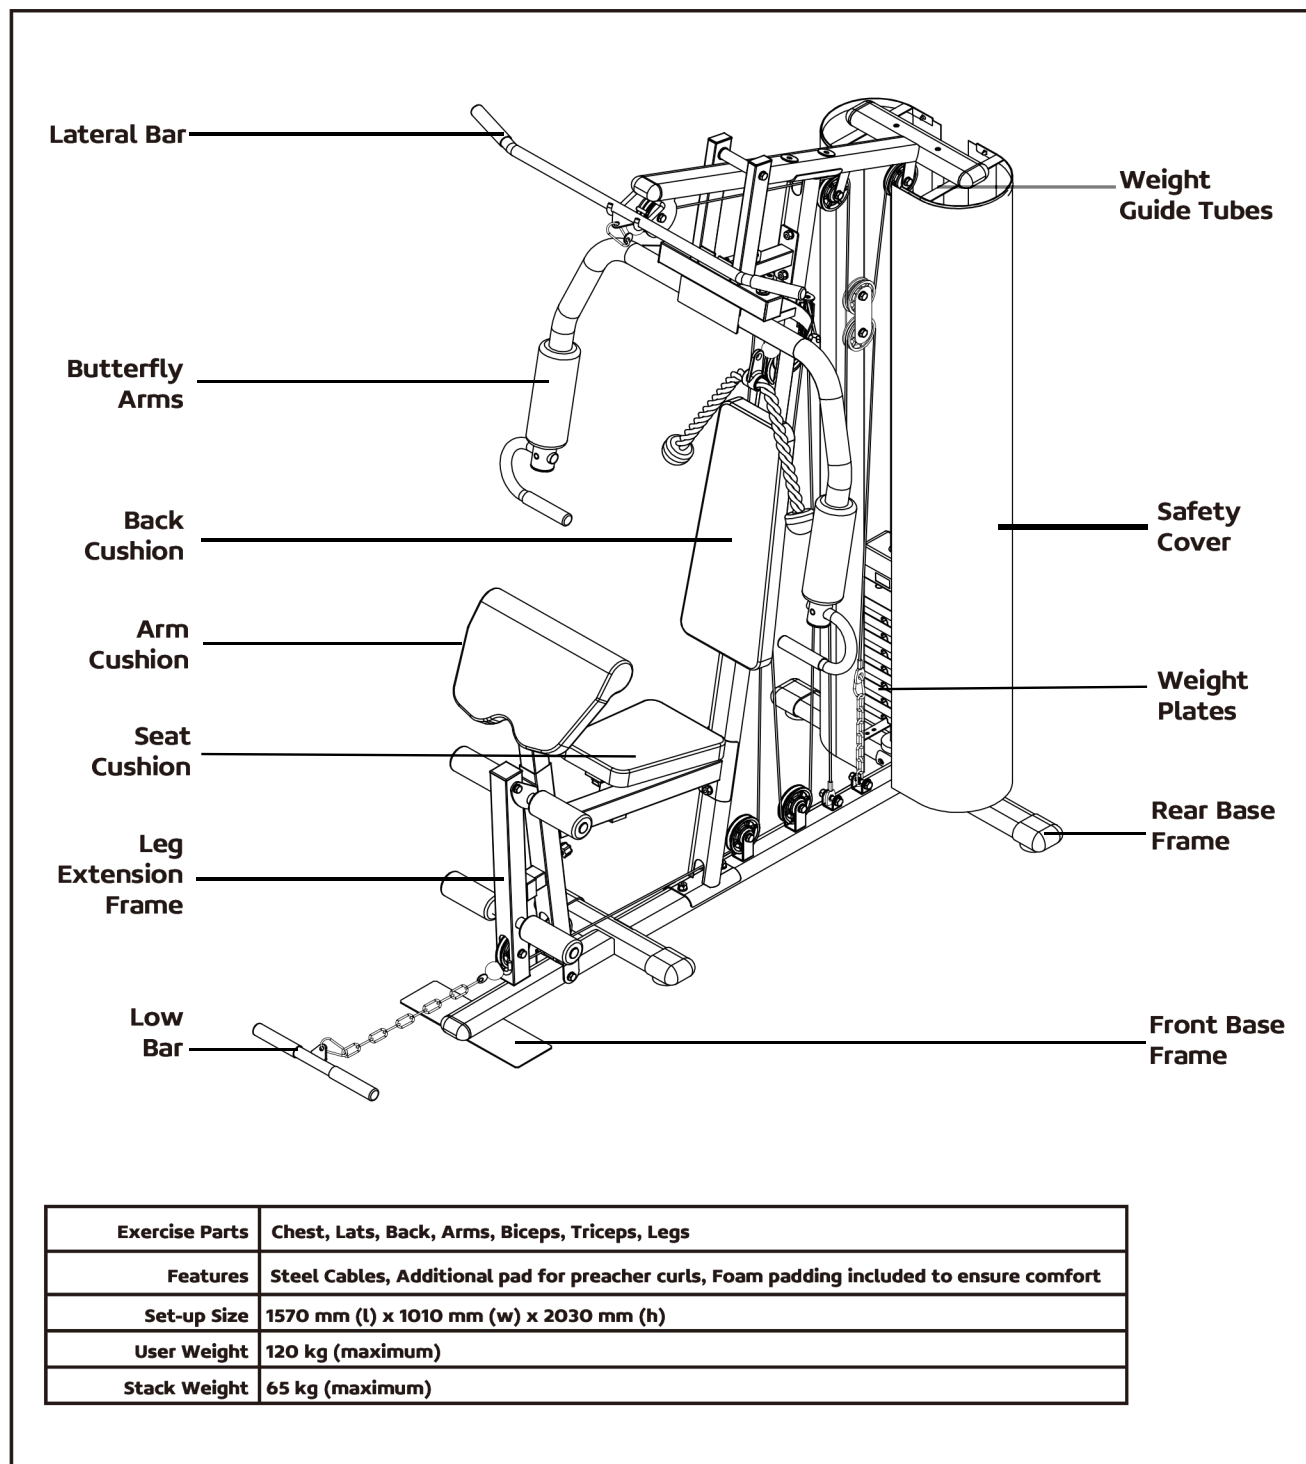

HARDWARE & TOOLS LIST




INSTRUCTIONS FOR ASSEMBLY

- Before you start to assemble, please check the hardware packaging to make sure all parts are included.
- Each step has its own packet of bolts and nuts (look for sticker indicating what step the packet will be used for)
- Ensure all nuts and bolts are tightened properly before moving onto the next step.
- Test the Plastic Dome Caps (45) on the Locknuts (85) for best fit.
- Basic tools, such as an Allen Key will be provided for assembly but additional tools will be required for complete and safe assembly.

IMPORTANT NOTICE: Some of the smaller parts may be pre-fitted to larger components, please ensure you check carefully before contacting us regarding any missing parts.

A long horizontal metal beam with several mounting points and a T-shaped bracket at one end.	A long horizontal metal beam with mounting points at both ends.	A long horizontal metal beam with a bracket at one end.	A horizontal metal beam with a bracket and a small wheel at one end.	A horizontal metal beam with a bracket at one end.
A T-shaped metal bracket.	A horizontal metal beam with a bracket at one end.	A vertical metal bar with a bracket at the bottom.	A horizontal metal beam with brackets at both ends.	A long diagonal metal beam with mounting points.
A curved metal arm with a bracket at the end.	A curved metal arm with a bracket at the end.	A U-shaped metal handle.	A long, slightly curved horizontal metal bar.	A horizontal metal bar with a bracket at one end.
A long, thin cylindrical foam tube.	A long, thin cylindrical metal tube.	A long, thin metal shaft with a series of small holes.	A U-shaped metal pulley.	A reverse U-shaped metal pulley.
A small metal pulley block.	A long, thin metal pipe with a black grip section. A "PRE-ASSEMBLED" label is present.	A horizontal metal tube with a bracket at one end.	A horizontal metal tube.	A U-shaped metal shaft.
A rectangular foam cushion.	A rectangular foam cushion.	A curved foam cushion.	A cylindrical foam roller.	A cylindrical foam roller.

HARDWARE & TOOLS LIST

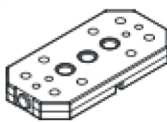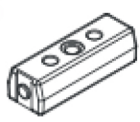				
31. Pro Prissdown Rope (1 PC)	32. Quick Knob (2 PCS)	33. Ankle Strap (1 PC)	34. Safety Cover (2 PCS)	35. Chain (short) (1 PC)
				
36. Chain (long) (1 PC)	37. Weight Plate (11 PCS)	38. Top Weight Plate (1 PC)	39. Selector Shaft Pin (1 PC)	40. Plastic Washer (1 PC)
				
41. Selector Shaft Bushing (1 PC)	42. Oil Bushing (Small) (2 PCS)	43. Oil Bushing (Big) (4 PCS)	44. Upper Cable (1 PC)	45. Butterfly Cable (1 PC)
				
46. Lower Cable (1 PC)	47. AB Strap Cable (1 PC)	48. Pothook (5 PCS)	49. Weight Selector Pin (1 PC)	50. Rubber Cushion (2 PCS)
				
51. Pulley (16 PCS)			54. Select Shaft End Cap (1 PC)	55. Pulley Bushing (4 PCS)
				
	57. Plum Blossom Nut (1 PC)	58. Handle Grip (6 PCS)	59. Oval Foot End Cap (4 PCS)	60. Epllipse End Plug (40 x 80 mm) (4 PCS)
				
61. Square End Cap (38 mm) (2PC)	62. Square End Plug (50 mm) (5 PCS)	63. Square End Plug (25 x 50 mm) (4 PCS)		
				
66. Round End Plug (25 mm) (4 PCS)	67. Round End Plug (50 mm) (4 PCS)	68. Hex Bolt (M12 x 160mm) (1 PC)	69. Hex Bolt (M10 x 55 mm) (2 PCS)	70. Hex Bolt (M10 x 100 mm) (3 PCS)

HARDWARE & TOOLS LIST

 71. Hex Bolt (M10 x 75 mm) (1 PC)	 72. Hex Bolt (M10 x 65 mm) (2 PCS)	 73. Hex Bolt (M8 x 60 mm) (2 PCS)	 74. Hex Bolt (M10 x 60 mm) (9 PCS)	 75. Hex Bolt (M10 x 45 mm) (14 PCS)
PRE-ASSEMBLED  76. Hex Bolt (M10 x 20 mm) (4 PCS)	 77. Hex Bolt (M8 x 55 mm) (2 PCS)	 78. Hex Bolt (M8 x 40 mm) (5 PCS)	 79. Hex Bolt (M6 x 15 mm) (8 PCS)	 80. Hex Bolt (M8 x 16 mm) (2 PCS)
PRE-ASSEMBLED (2 PCS)  81. Washer (M12) (4 PCS)	PRE-ASSEMBLED (4 PCS)  82. Washer (M10) (60 PCS)	 83. Washer (M10) (4 PCS)	 84. Washer (M8) (12 PCS)	 85. Arc Washer (M8) (4 PCS)
PRE-ASSEMBLED  86. Washer (Ø30 X Ø10) (1 PC)	PRE-ASSEMBLED (2 PCS)  87. Nylon Nut (M12) (3 PCS)	 88. Nylon Nut (M10) (31 PCS)	 89. Nylon Nut (M8) (5 PCS)	


PARTS LIST

No.	Description	Qty	No.	Description	Qty
1	Base Frame	1	36	Chain (long)	1
2	Back Base Frame	1	37	Weight Plate	11
3	Leg Extension Frame	1	38	Top Weight Plate	1
4	Front Support Frame	1	39	Selector Shaft Pin	1
5	Arm Cushion Support	1	40	Plastic Washer	1
6	Seat Base Frame	1	41	Selector Shaft Bushing	1
7	Seat Support Frame	1	42	Oil Bushing (Small)	2
8	Press Bar	1	43	Oil Bushing (Big)	4
9	Upper Cross Beam	1	44	Upper Cable	1
10	Support Frame	1	45	Butterfly Cable	1
11	Right Butterfly Arm	1	46	Lower Cable	1
12	Left Butterfly Arm	1	47	AB Strap Cable	1
13	Handle Tube	2	48	Pothook	5
14	Lat Bar	1	49	Weight Selector Pin	1
15	Low Bar	1	50	Rubber Cushion	2
16	Foam Tube	2	51	Pulley	16
17	Weight Guide Tube	2			
18	Selector Shaft	1			
19	Pulley U	4	54	Select Shaft End Cap	1
20	Reverse U	1	55	Pulley Bushing	4
21	Single Pulley Block	2			
22	Tobacco-pipe	1	57	Plum Blossom Nut	1
23	Prop Support	1	58	Handle Grip	6
24	Iron Bushing	4	59	Oval Foot End Cap	4
25	U-type Shaft	4	60	Epllipse End Plug (40 x 80 mm)	4
26	Seat Cushion	1	61	Square End Cap (38 mm)	2
27	Backrest Cushion	1	62	Square End Plug (50 mm)	5
28	Arm Cushion	1	63	Square End Plug (25 x 50 mm)	4
29	Leg Foam Roller	4			
30	Arm Foam Roller	2			
31	Pro Prissdown Rope	1	66	Round End Plug (25 mm)	4
32	Quick Knob	2	67	Round End Plug (50 mm)	4
33	Ankle Strap	1	68	Hex Bolt (M12 x 160 mm)	1
34	Safety Cover	2	69	Hex Bolt (M10 x 55 mm)	2
35	Chain (short)	1	70	Hex Bolt (M10 x 100 mm)	3

PARTS LIST

No.	Description	Qty
71	Hex Bolt (M10 x 75 mm)	1
72	Hex Bolt (M10 x 65 mm)	2
73	Hex Bolt (M8 x 60 mm)	2
74	Hex Bolt (M10 x 60 mm)	9
75	Hex Bolt (M10 x 45 mm)	14
76	Hex Bolt (M10 x 20 mm) PRE-ASSEMBLED	4
77	Hex Bolt (M8 x 55 mm)	2
78	Hex Bolt (M8 x 40 mm)	5
79	Hex Bolt (M6 x 15 mm)	8
80	Hex Bolt (M8 x 16 mm)	2
81	Washer (M12) PRE-ASSEMBLED	4
82	Washer (M10) PRE-ASSEMBLED	60
83	Arc Washer (M10)	4
84	Washer (M8)	12
85	Arc Washer (M8)	4
86	Washer (Ø30 X Ø 10) PRE-ASSEMBLED	1
87	Nylon Nut (M12) PRE-ASSEMBLED	3
88	Nylon Nut (M10)	31
89	Nylon Nut (M8)	5

EXPLODED DRAWING

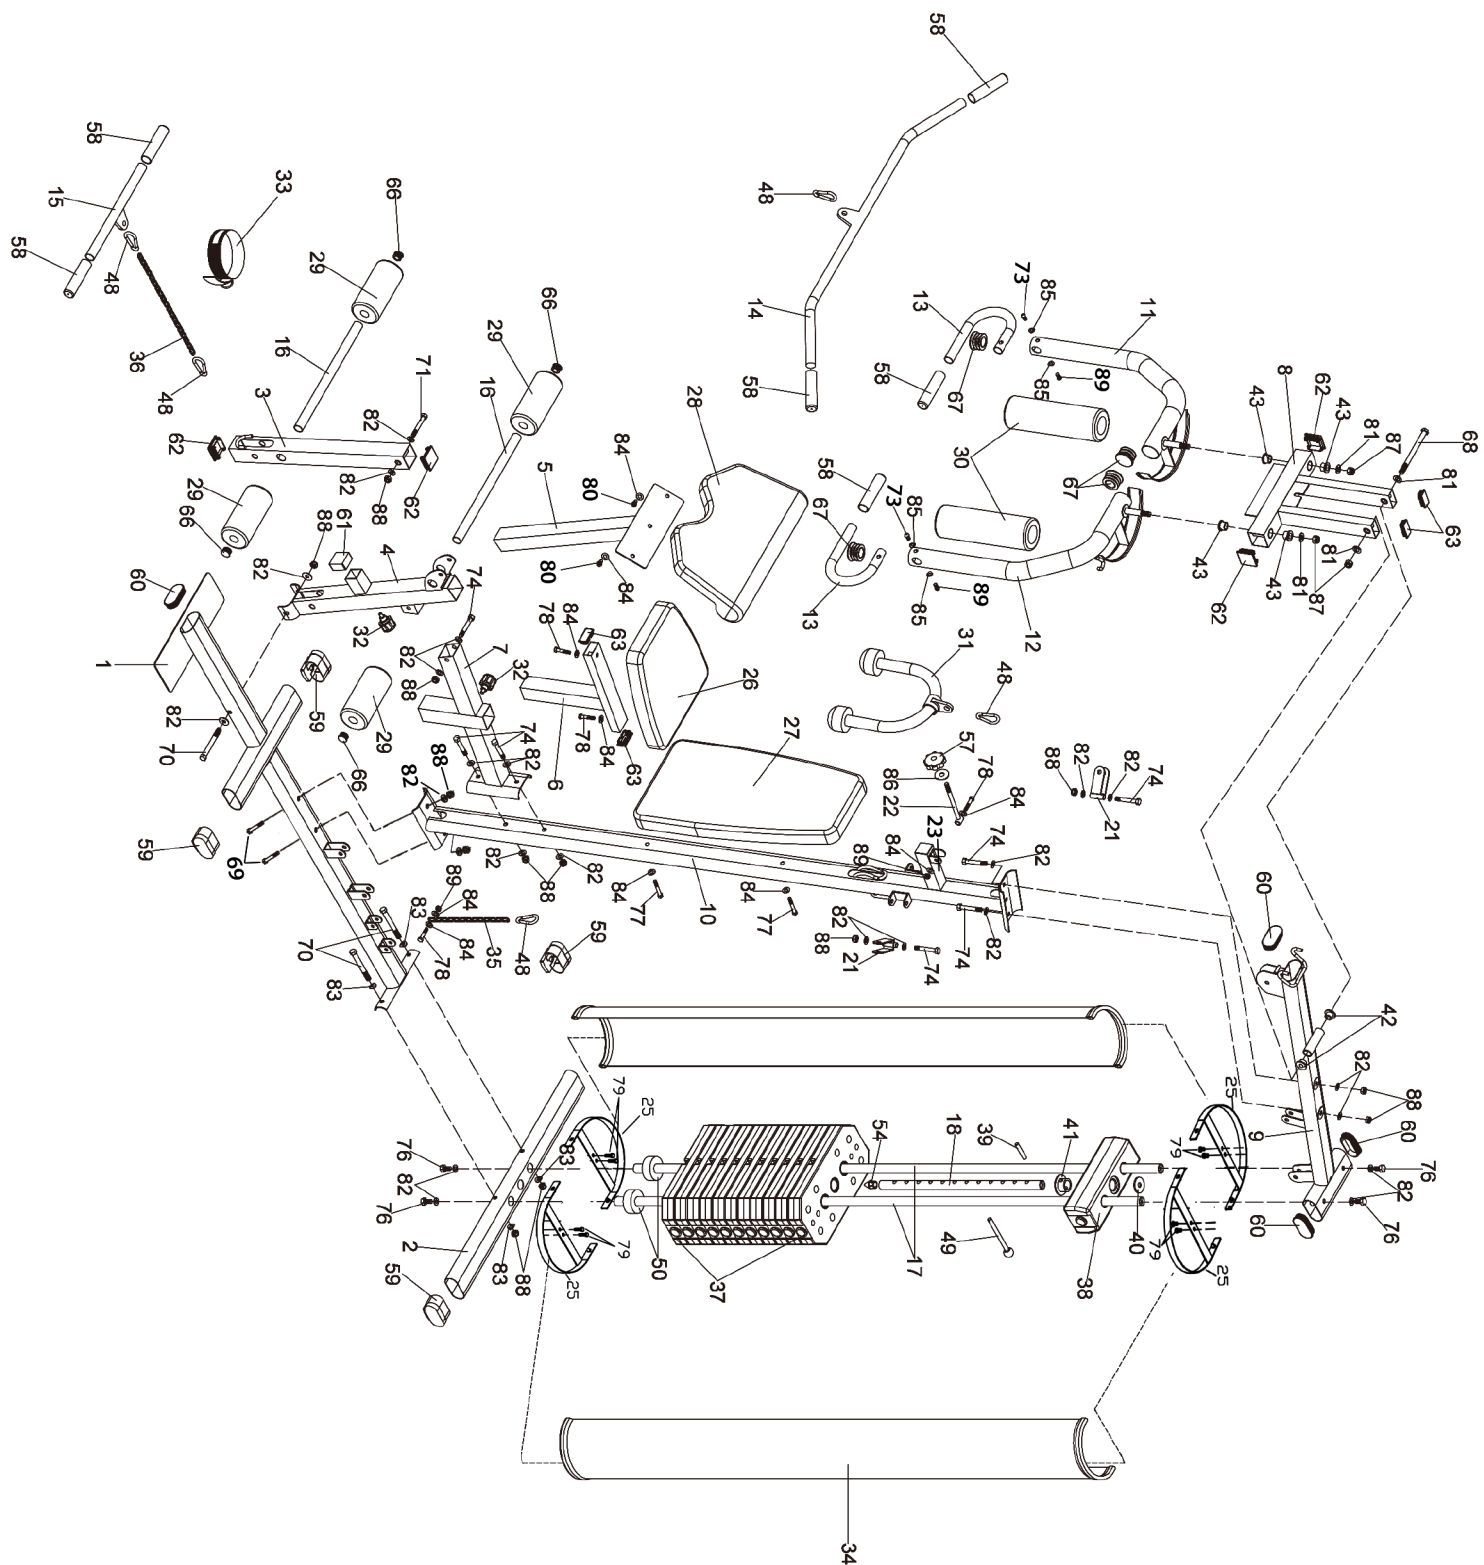


ASSEMBLY STEPS

1. PREPARATION

- Before assembling make sure that you will have enough space around the item.
- Use the supplied parts and hardware for the assembly.
- Before assembling please check whether all the required parts have been supplied as per the exploded drawing on the opposite page.
- **Notice:** Some of the smaller parts may be pre-fitted to larger components, please ensure you check carefully before contacting us regarding any missing parts.

STEP 1

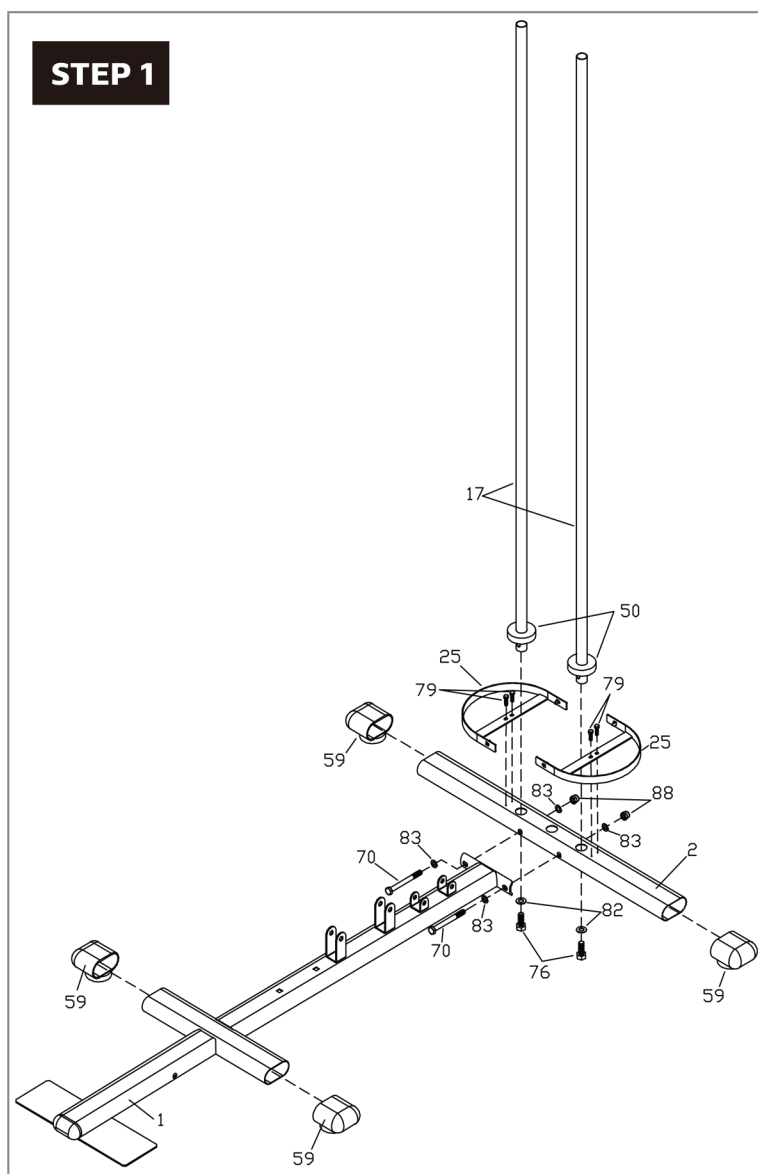


STEP 1:

Attach the 4 Oval Foot End Caps (59) to the Base Frame (1) and the Back Base Frame (2). Remove 2 Hex Bolts (M10 x 20 mm) (76) and 2 Washers (M10) (82) from Weight Guide Tube (17). Insert 2 Weight Guide Tubes (17) into the Back Base Frame (2), using 2 Hex Bolts (M10 x 20 mm) (76) and 2 Washers (M10) (82).

Attach the Base Frame (1) to the Back Base Frame (2), using 2 Hex Bolts (M10 x 100mm) (70), 4 Arc Washers (M10) (83) and 2 Nylon Nuts (M10) (88). Slide the Lower Fixed Tube (25) onto the 2 Weight Guide Tubes (17), using 4 Hex Bolts (M6 x 15mm) (79). Slide 2 Rubber Rings (50) onto 2 Weight Guide Tubes (17).

ASSEMBLY STEPS

STEP 2

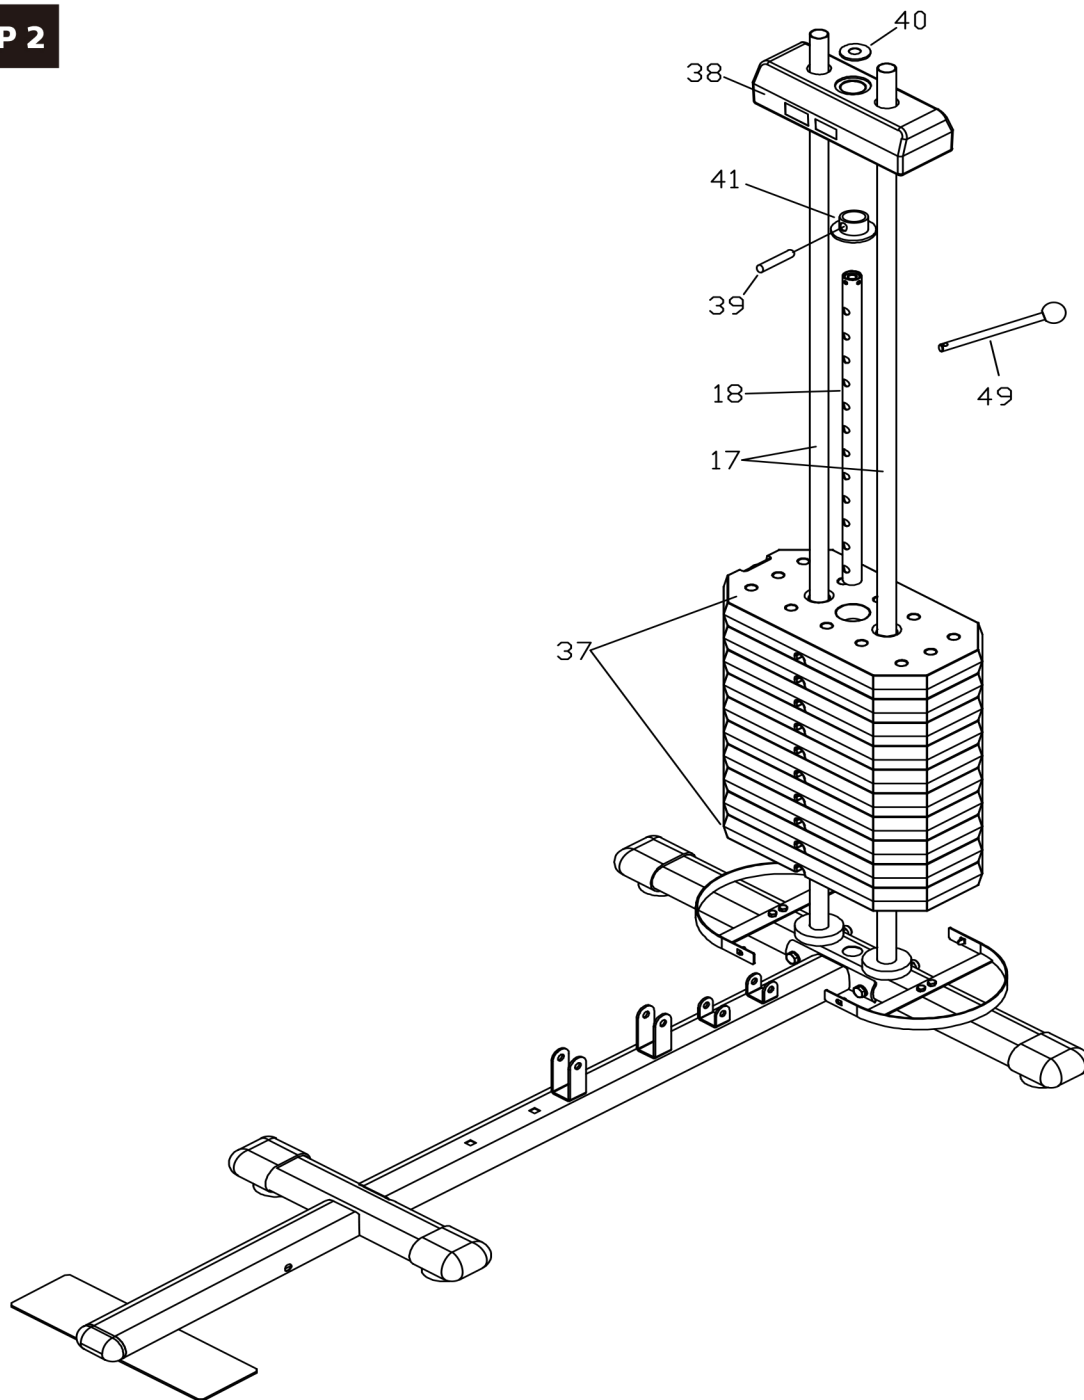


STEP 2:

Slide the 11 Weight Plates (37) down onto the Weight Guide Tube (17). Slide the Selector Shaft Bushing (41) down the Selector Shaft (18) at first hole fix with Selector Shaft Pin (39). Insert the Selector Shaft (18) into hole of the Weight Plate (37).

Slide the Top Weight Plate (38) down the Weight Guide Tube (17), insert the Weight Selector Pin (49) into hole of desired weight. Put the Plastic Washer (40) on the Top Weight Plate (38).

ASSEMBLY STEPS

STEP 3

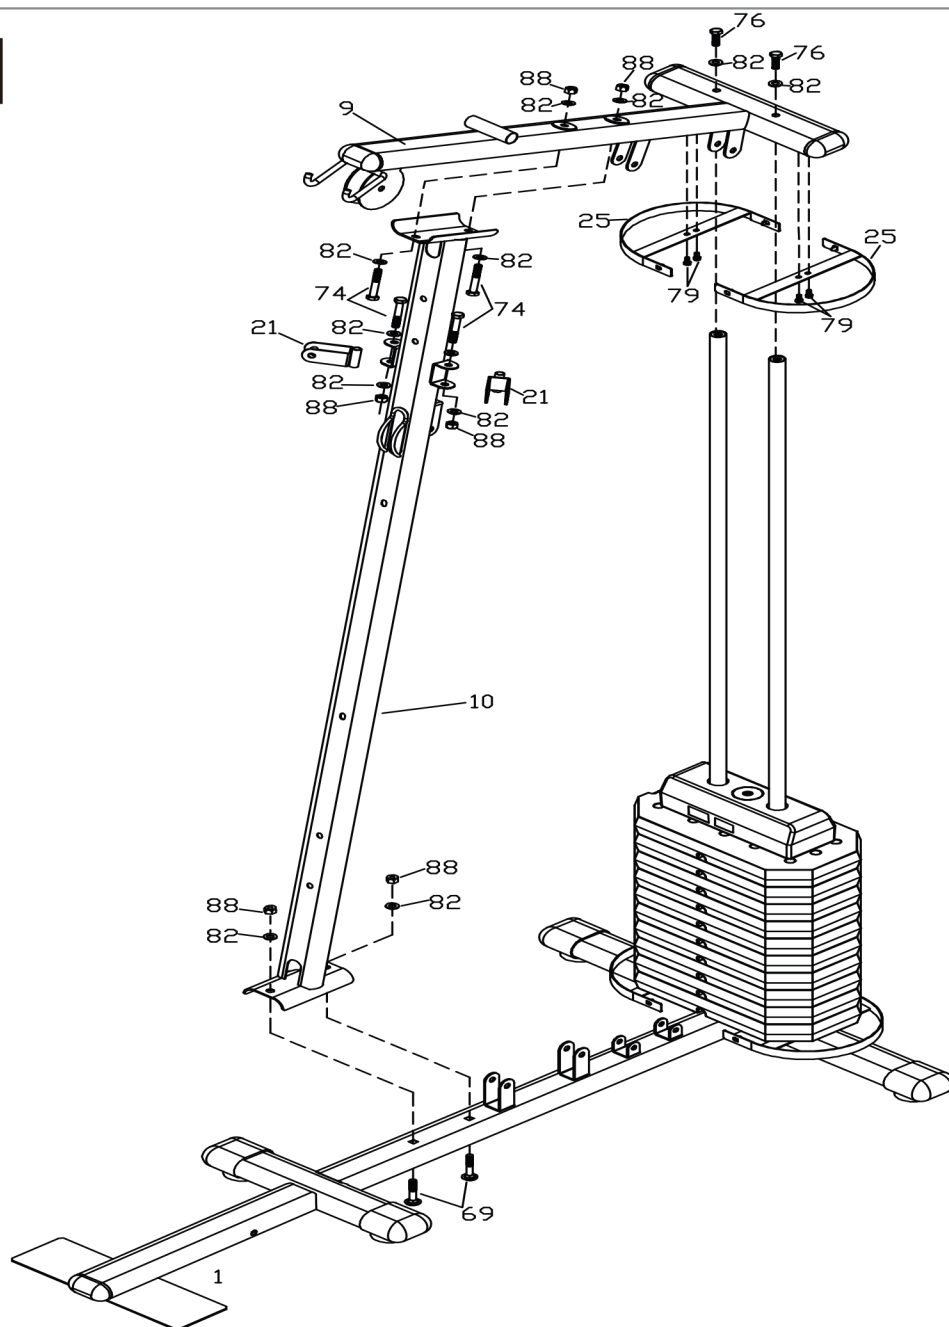

STEP 3:


Attach the Upper Fixed Tube (25) to the Weight Guide Tube (17), using 4 Hex Bolts (M6 x 15 mm) (79). Attach the Support Frame (10) to the Base Frame (1), using 2 Hex Bolts (M10 x 55 mm) (69), 4 Washers (M10) (82) and 2 Nylon Nuts (M10) (88). Remove 2 Hex Bolts (M10 x 20 mm) (76) and 2 Washers (M10) (82) from Weight Guide Tube (17). Attach the Upper Cross Beam (9) to the Weight Guide Tubes (17), using Hex Bolts (M10 x 20 mm) (76) and 2 Washers (M10) (82). Attach the Upper Cross Beam (9) to the Support Frame (10), using 2 Hex Bolts (M10 x 60 mm) (74), 4 Washers (M10) (82) and 2 Nylon Nuts (M10) (88).

Note: Attach the Upper Fixed Tube (24) to the Weight Guide Tube (17), and be Close to the Upper Cross Beam (9).

Attach 2 Single Pulley Blocks (21) to the Support Frame (10), using 2 Hex Bolts (M10 x 60 mm) (74), 4 Washers (M10) (82) and 2 Nylon Nuts (M10) (88)

ASSEMBLY STEPS

STEP 4

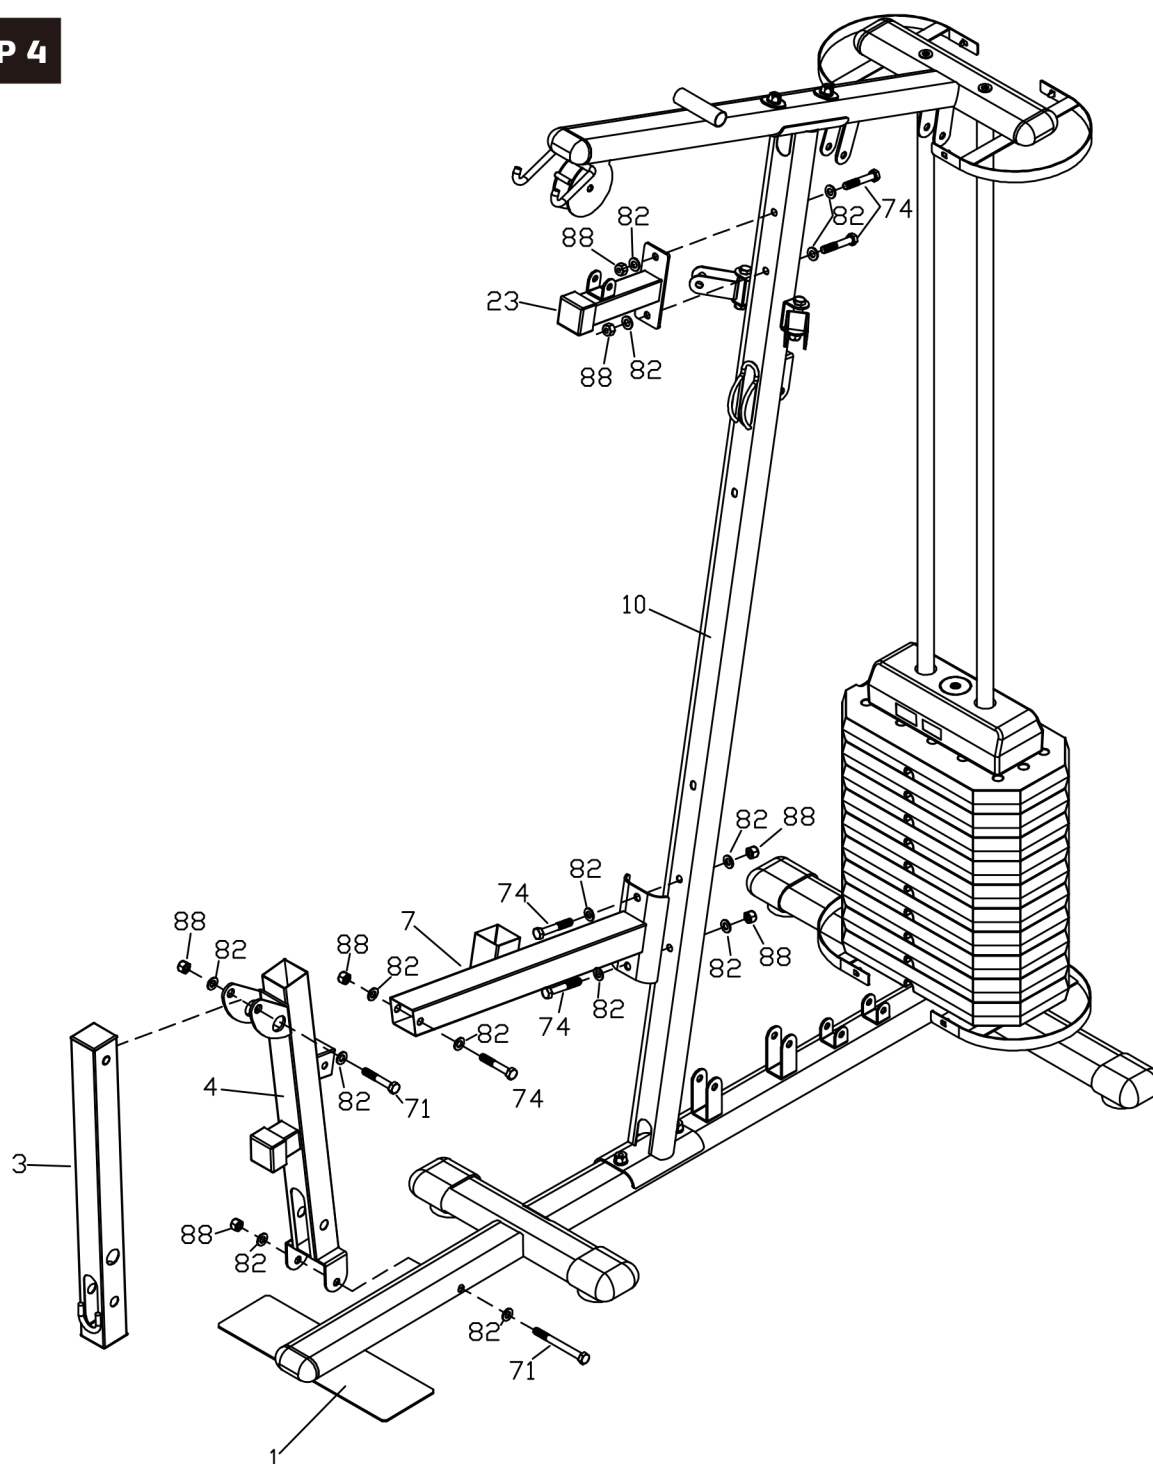


STEP 4:

Attach the Seat Support Frame (7) to the Support Frame (10), using 2 Hex Bolts (M10 x 60 mm) (74), 4 Washers (M10) (82) and 2 Nylon Nuts (M10) (88). Attach the Front Support Frame (4) to the Seat Support Frame (7), using Hex Bolt (M10 x 60 mm) (74), 2 Washers (M10) (82) and Nylon Nut (M10) (88). Attach the Front Support Frame (4) to the Base Frame (1), using Hex Bolt (M10 x 100 mm) (70), 2 Washers (M10) (82) and Nylon Nut (M10) (88). Attach the Leg Extension Frame (3) to the Front Support Frame (4), using Hex Bolt (M10 x 75 mm) (71), 2 Washers (M10) (82) and Nylon Nut (M10) (88).

ASSEMBLY STEPS

STEP 5

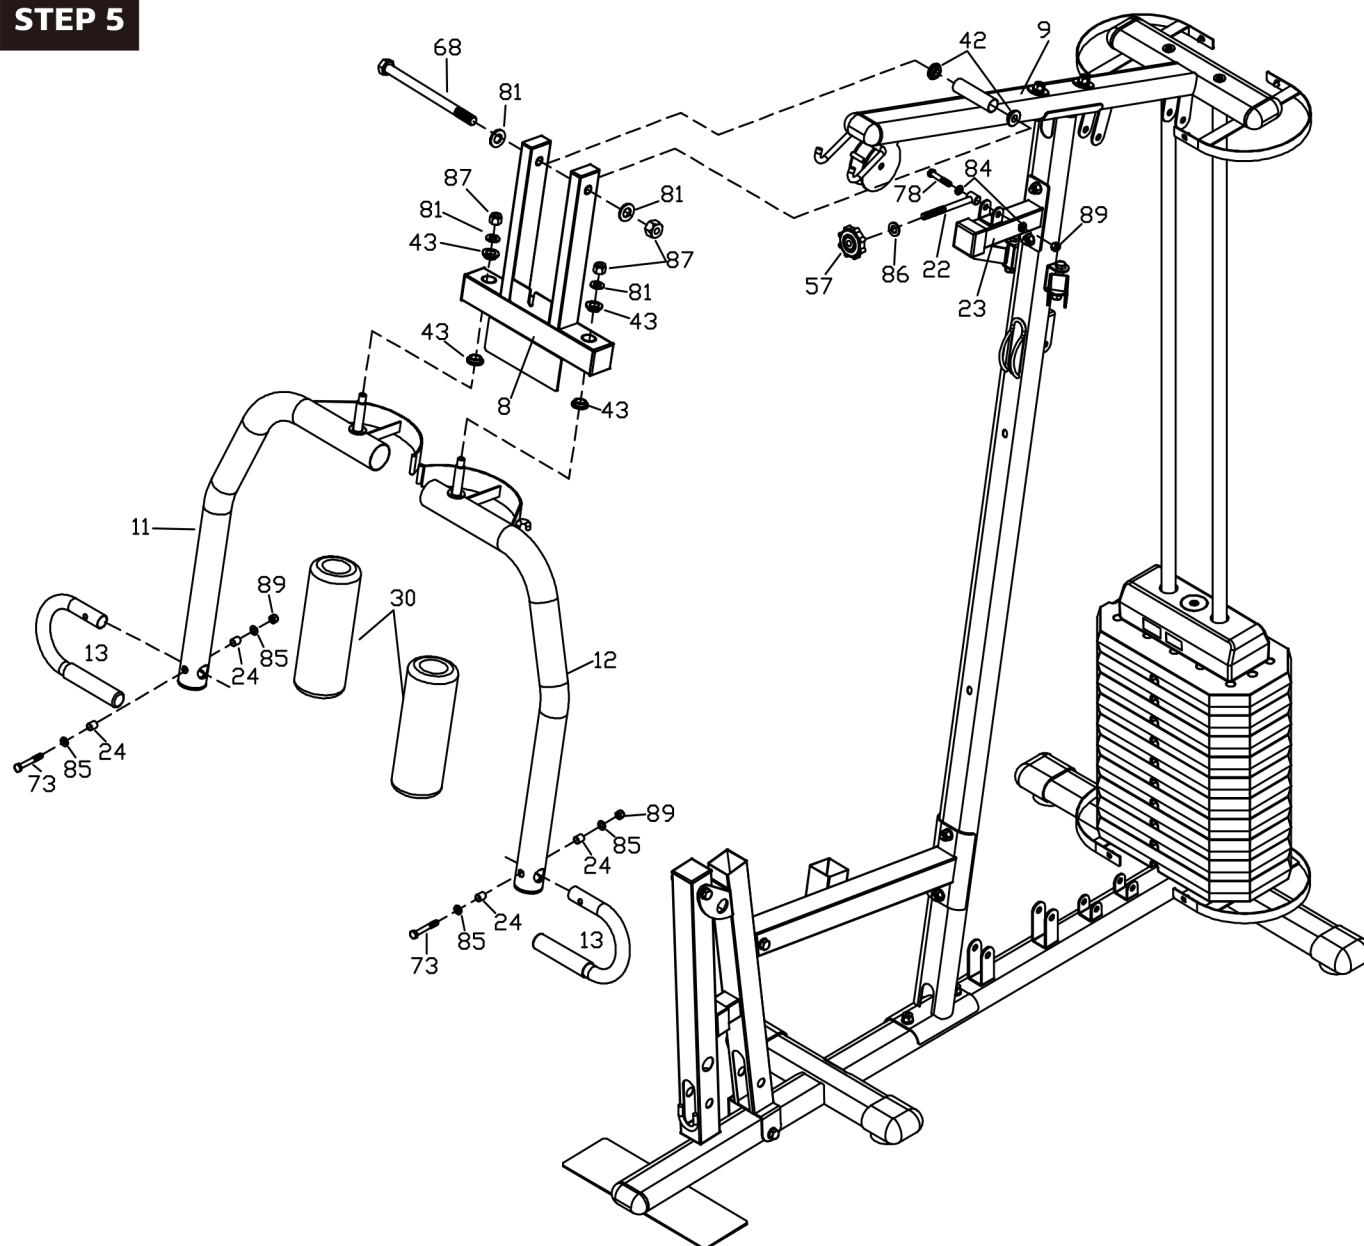


STEP 5:

NOTE: Oil Bushing (small) (42) have been Pre-assembled into Upper Cross Beam (9). Oil Bushing (big) (43) have been Pre-assembled into Right & Left Butterfly Arm (11 & 12).

Attach the Press Bar (8) to the Upper Cross Beam (9), using Hex Bolt (M12 x 160 mm) (68), 2 Washers (M12) (81) and Nylon Nut (M12) (87). Remove 2 Oil Bushings (big) (43), 2 Washers (M12) (81) and 2 Nylon Nuts (M12) (87). Attach the Right & Left Butterfly Arm (11 & 12) to the Press Bar (8), using 4 Oil Bushings (big) (43), 2 Washers (M12) (81) and 2 Nylon Nuts (M12) (87). Slide 2 Arm Foam Rollers (30) onto the Right & Left Butterfly Arm (11&12). Attach the Handle Tube (13) to the Right & Left Butterfly Arm (11&12), using 8 Bolts (M8 x 60 mm) (73) and 2 Arc Washers (M8) (85). Attach the Tobacco-pipe (22) to the Support Frame (10), using Hex Bolt (M8 x 40 mm) (78), 2 Washers (M8) (84) and Nylon Nut (M8) (89). Slide the Washer (Ø30X Ø10) (86) and Plum Blossom Nut (57) onto the Tobacco-pipe (22).

ASSEMBLY STEPS

STEP 6

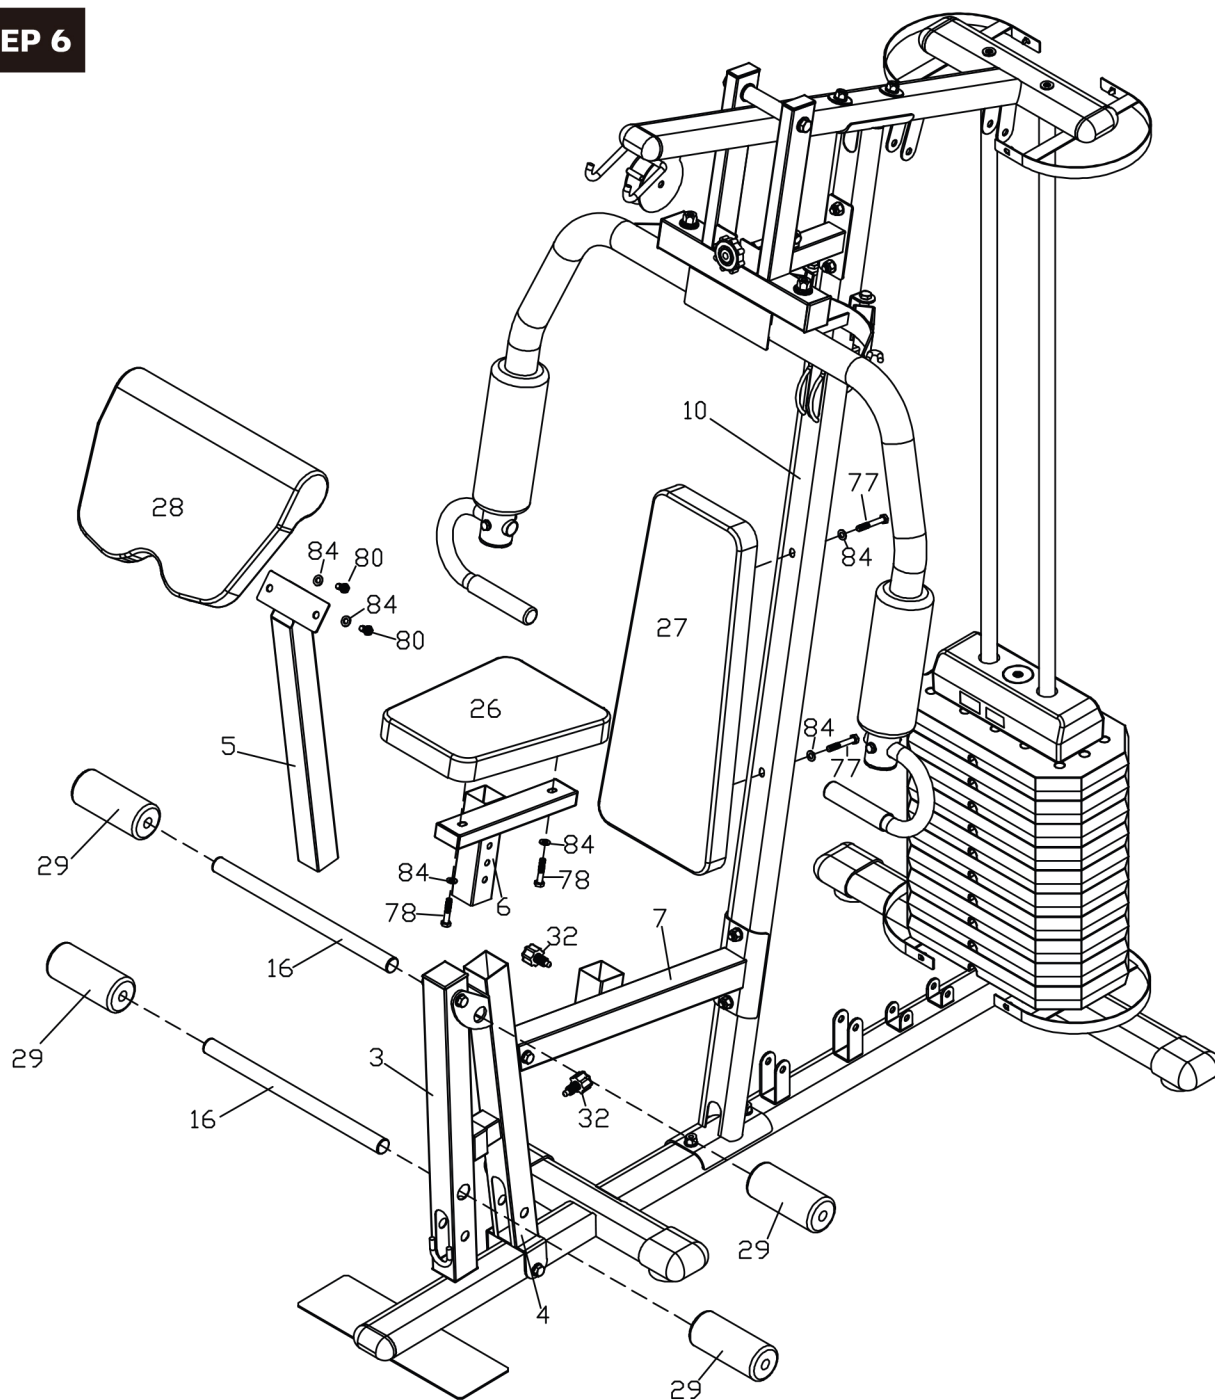


STEP 6:

Insert 2 Foam Tubes (16) into the Leg Extension Frame (3) and the Front Support Frame (4). Slide 4 Leg Foam Rollers (29) onto the Foam Tubes (16). Attach the Backrest Cushion (27) to the Support Frame (10), using 2 Hex Bolts (M8 x 55 mm) (77) and 2 Washers (M8) (84). Attach the Seat Cushion (26) to the Seat Base Frame (6), using 2 Hex Bolts (M8 x 40 mm) (78) and 2 Washers (M8) (84). Insert the Seat Base Frame (6) into the Seat Support Frame (7), using Quick Knob (32). Attach the Arm Cushion (28) to the Arm Cushion Support (5), using 2 Hex Bolts (M8 x 15 mm) (80) and 2 Washers (M8) (84). Insert the Arm Cushion Support (5) into the Front Support Frame (4), using Quick Knob (32).


ASSEMBLY STEPS

STEP 7

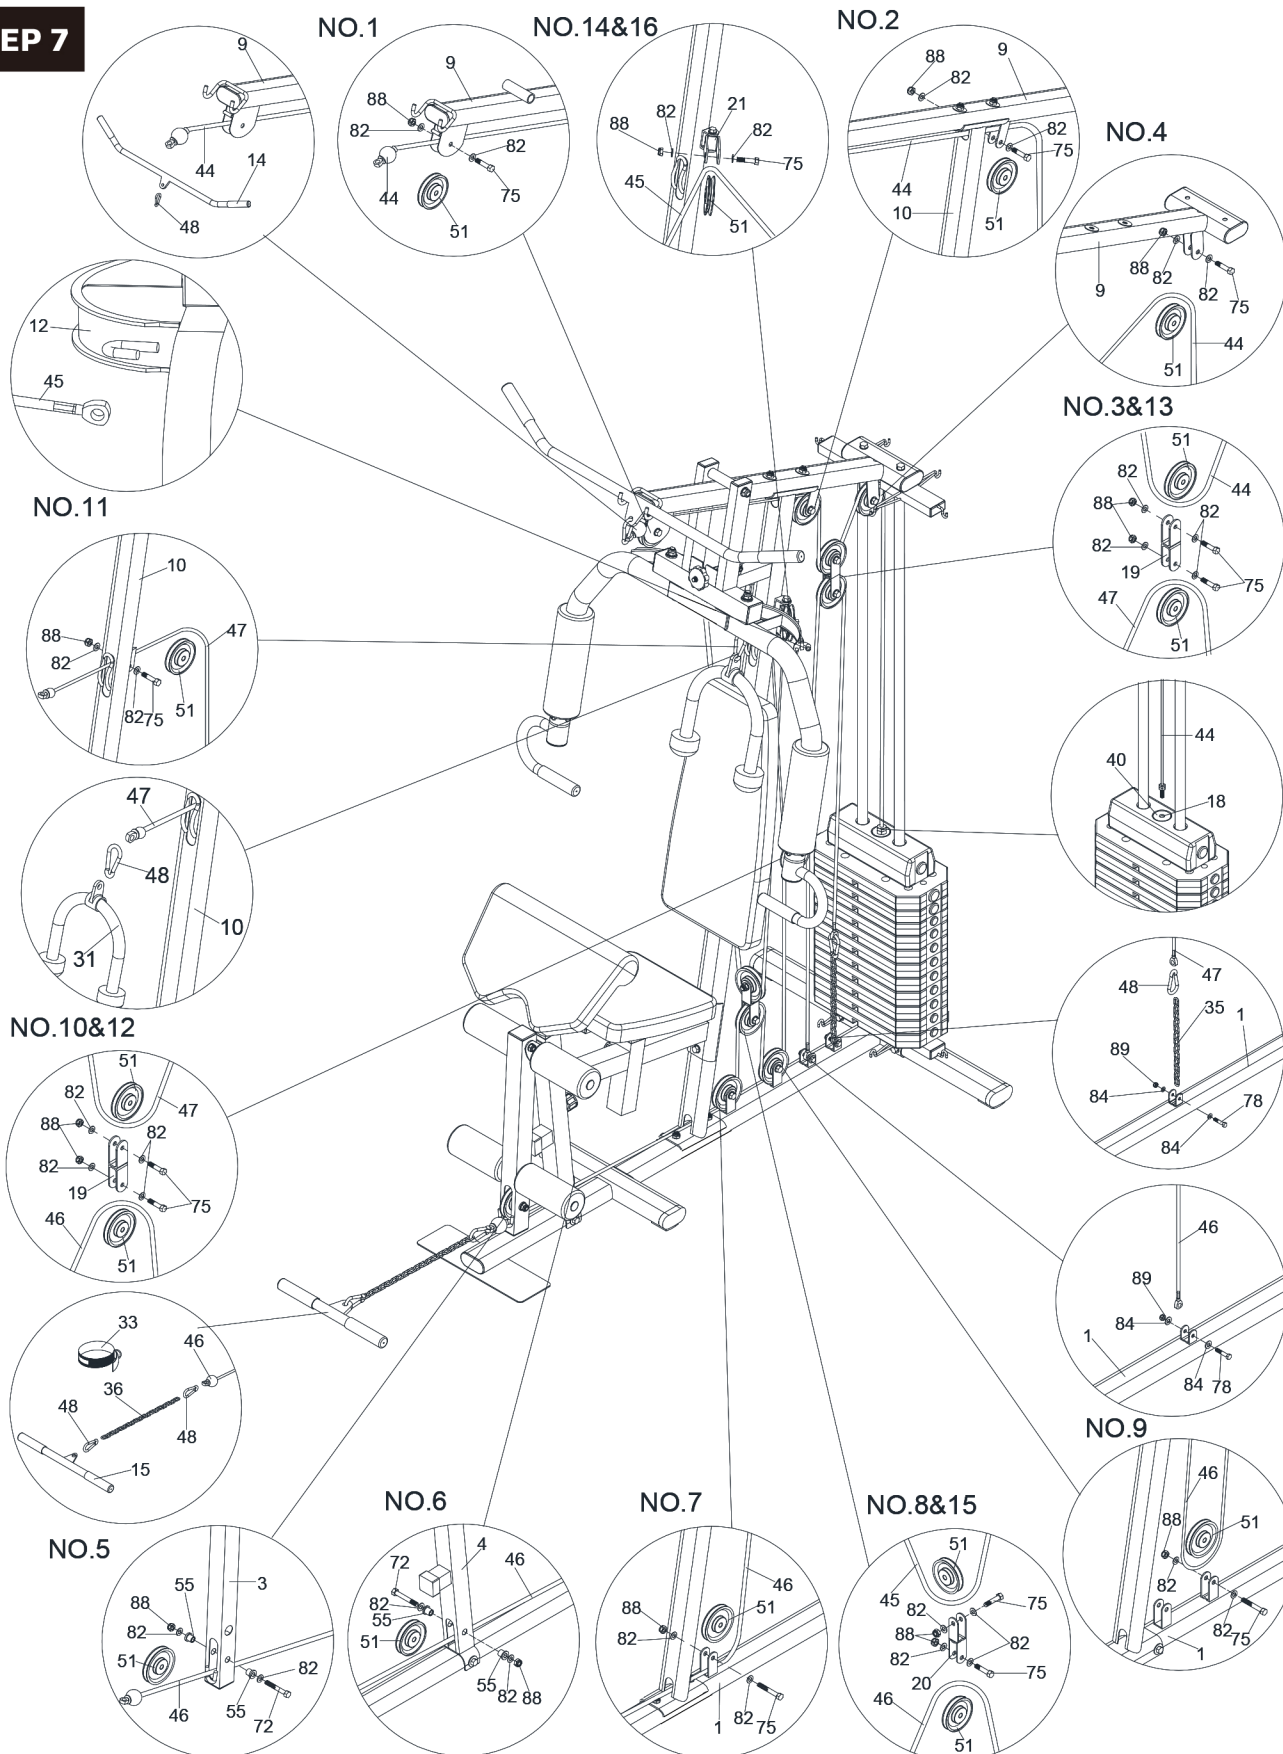

ASSEMBLY STEPS

STEP 7

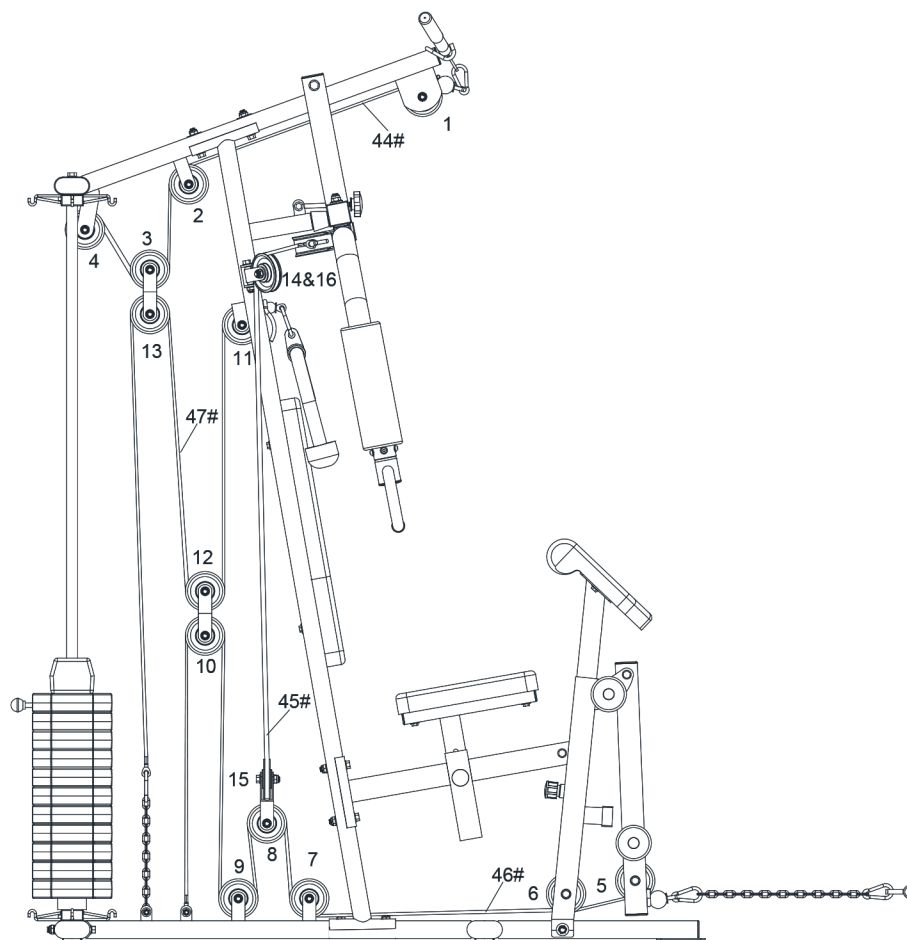

STEP 7:

Start with the Upper Cable (44):

1. With Upper Cable (44) in groove of Pulley (51), Thread Cable (44) through Upper Cross Beam (9).
2. Install Pulley No.1 (51) to Upper Cross Beam (9), using Hex Bolt (M10 x 45 mm) (75), 2 Washers (M10) (82) and Nylon Nut (M10) (88).
3. Install Pulley No.2 (51) to Upper Cross Beam (9), using Hex Bolt (M10 x 45 mm) (75), 2 Washers (M10) (82) and Nylon Nut (M10) (88).
4. Install Pulley No.4 (51) to Upper Cross Beam (9), using (M10 x 45 mm) Hex Bolt (75), 2 Washers (M10) (82) and Nylon Nut (M10) (88).
5. Install Pulley No.3 (51) to Pulley U (19), using Hex Bolt (M10 x 45 mm) (75), 2 Washers (M10) (82) and Nylon Nut (M10) (88).
6. Attach the bolt end of Upper Cable (44) to Selector Shaft (18) with Plastic Washer (40).
7. Attach the Lat Bar (14) to the other end of Upper Cable (44) using the Pothook (48).

Assembly the Butterfly Cable (45):

1. Attach the both ends of Butterfly Cable (45) to Right & Left Butterfly Arm (11&12), using 2 Plastic Covers (65).
2. Install Pulley No.14 & 16 (51) to 2 Single Pulley Blocks (21), using 2 Hex Bolts (M10 x 45 mm) (75), 4 Washers (M10) (82) and 2 Nylon Nuts (M10) (88).
3. Install Pulley No.15 (51) to Reverse U (20), using Hex Bolt (M10 x 45 mm) (75), 2 Washers (M10) (82) and Nylon Nut (M10) (88).

ASSEMBLY STEPS

Assembly the Lower Cable (46):


1. With the Lower Cable (46) in groove of Pulley (51) through Leg Extension Frame (3).
2. Install Pulley No.5 (51) and 2 Pulley Bushings (55) to Leg Extension Frame (3), using Hex Bolt (M10 x 70 mm) (72), 2 Washers (M10) (82) and Nylon Nut (M10) (88)
3. Install Pulley No.6 (51) and 2 Pulley Bushings (55) to Front Support Frame (4), using Hex Bolt (M10 x 70 mm) (72), 2 Washers (M10) (82) and Nylon Nut (M10) (88).
4. Install Pulley No.7 (51) to Base Frame (1), using Hex Bolt (M10 x 45 mm) (75), 2 Washers (M10) (82) and Nylon Nut (M10) (88).
5. Install Pulley No.8 (51) to Reverse U (20), using Hex Bolt (M10 x 45 mm) (75), 2 Washers (M10) (82) and Nylon Nut (M10) (88).
6. Install Pulley No.9 (51) to Base Frame (1), using Hex Bolt (M10 x 45 mm) (75), 2 Washers (M10) (82) and Nylon Nut (M10) (88).
7. Install Pulley No.10 (51) to Pulley U (19), using Hex Bolt (M10 x 45 mm) (75), 2 Washers (M10) (82) and Nylon Nut (M10) (88).
8. Attach the end of Lower Cable (46) to Base Frame (1), using Hex Bolt (M8 x 40 mm) (78), 2 Washers (M8) (84) and Nylon Nut (M8) (89).
9. Attach Low Bar (15) or Ankle Strap (33) to the other end of Lower Cable (46), using Chain (long) (36) and 2 Pothooks (48).

Assembly the AB Strap Cable (47):

1. With the AB Strap Cable (47) in groove of Pulley (51) through Support Frame (10).
2. Install Pulley No.11 (51) to Support Frame (10), using Hex Bolt (M10 x 45 mm) (75), 2 Washers (M10) (82) and Nylon Nut (M10) (88).
3. Install Pulley No.12 (51) to Pulley U (19), using Hex Bolt (M10 x 45 mm) (75), 2 Washers (M10) (82) and Nylon Nut (M10) (88).
4. Install Pulley No.13 (51) to Pulley U (19), using Hex Bolt (M10 x 45 mm) (75), 2 Washers (M10) (82) and Nylon Nut (M10) (88).
5. Attach the end of AB Strap Cable (47) to Base Frame (1), using Chain (short) (35), Pothook (48), Hex Bolt (M8 x 40 mm) (78), 2 Washers (M8) (84) and Nylon Nut (M8) (89).
6. Attach Pro Prissdown Rope (31) to the other end of AB Strap Cable (47), using Pothook (48).

ASSEMBLY STEPS

STEP 8

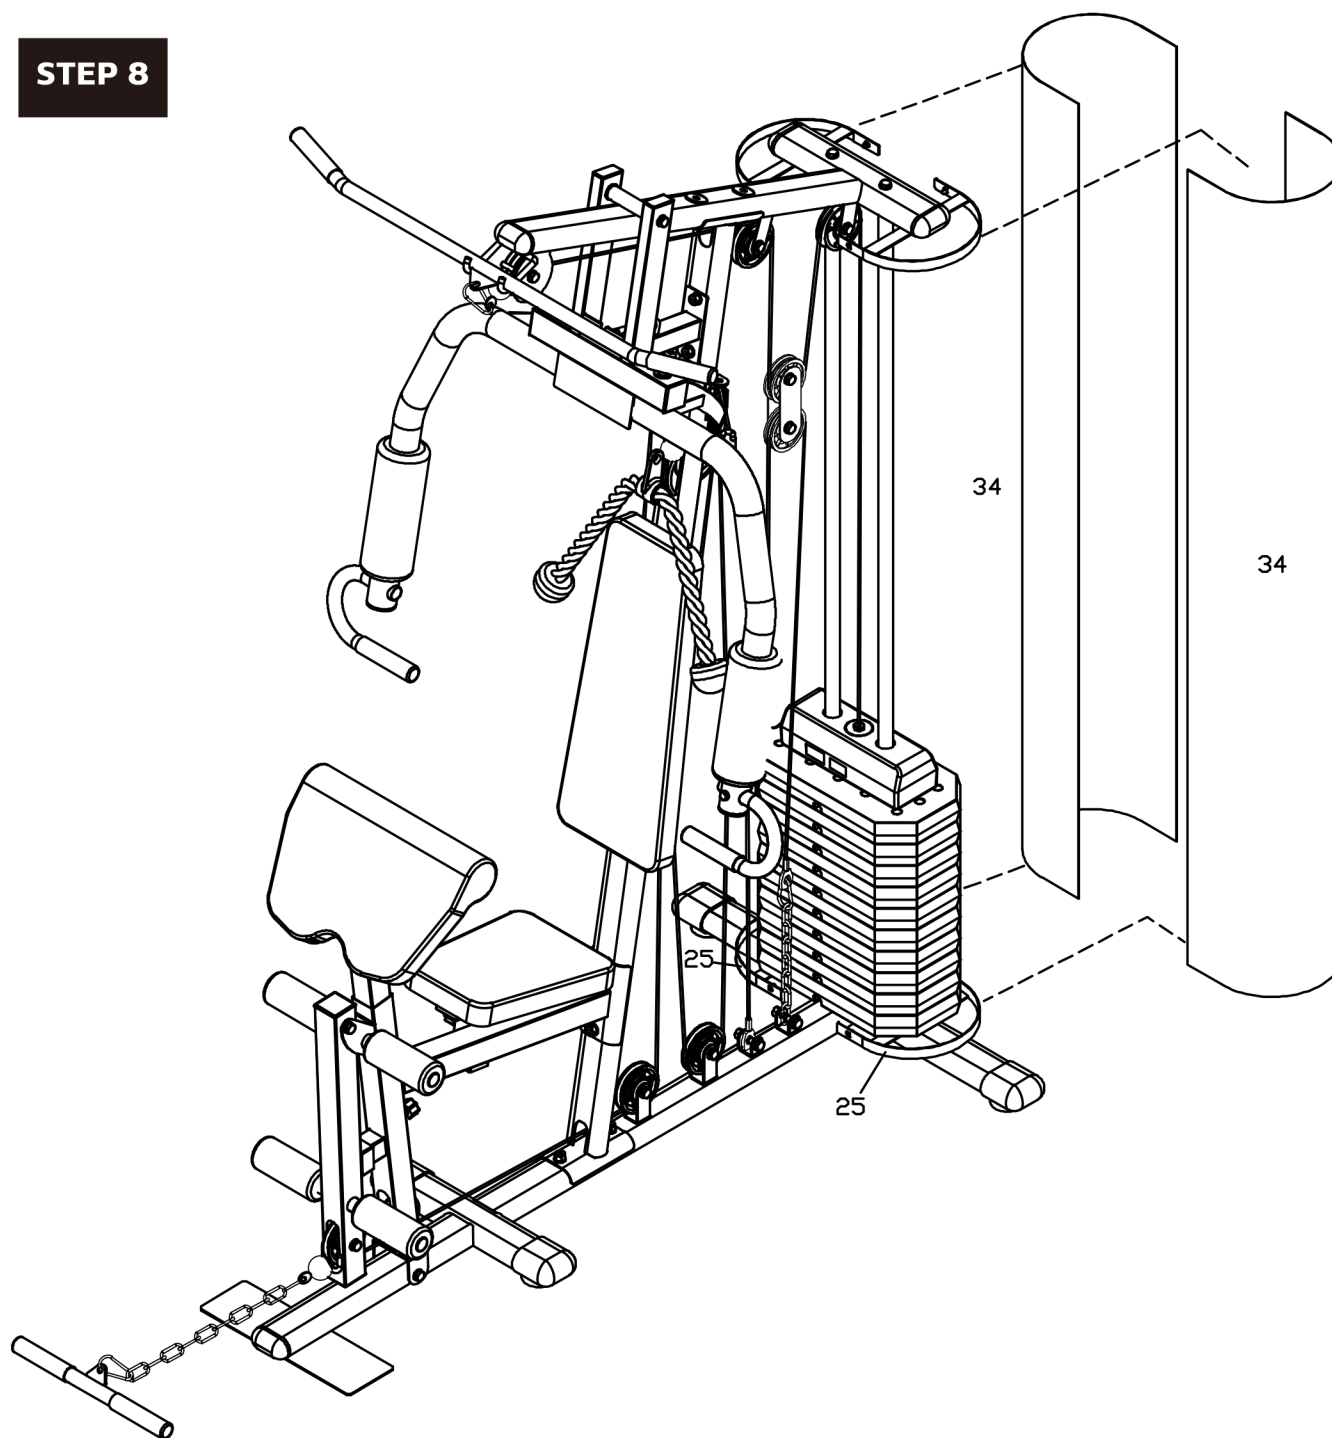

STEP 8:

Insert the U-type Shaft (25) onto both up and down ends of the Safety Cover (34). Attach the Safety Cover (34) to Cover (34) , and then use Hex Bolt (M8 x 15 mm)(79) to fix the Upper Fixed Tube (24) onto the Weight Guide Tube (17).

FITNESS TIPS & TECHNIQUES

AEROBIC EXERCISE

Aerobic exercise is any sustained activity that sends oxygen to your muscles via your heart and lungs. Aerobic exercise improves the fitness of your lungs and heart – your body's most important muscle. Aerobic exercise fitness is promoted by any activity that uses your large muscles (arms, legs, or buttocks, for example). Your heart beats quickly and you breathe deeply. An aerobic exercise should form part of your entire exercise routine.


WEIGHT TRAINING

Along with aerobic exercising which helps get rid of and keep off the excess fat that our bodies can store, weight training is an essential part of the exercise routine process. Weight training helps tone, build and strengthen muscle. If you are working above your target zone, you may want to do a lesser amount of reps. Always consult your physician before beginning any exercise program.

MUSCLE CHART

TROJAN ELITE GYM 1.0

The exercise routine that is performed on the Trojan Elite Gym 1.0 will develop your whole body. The targeted muscle groups are the chest, shoulders, back, legs and arms. It will also condition the circulatory system and provide a good aerobic workout. These muscle groups are highlighted on the muscle chart below.

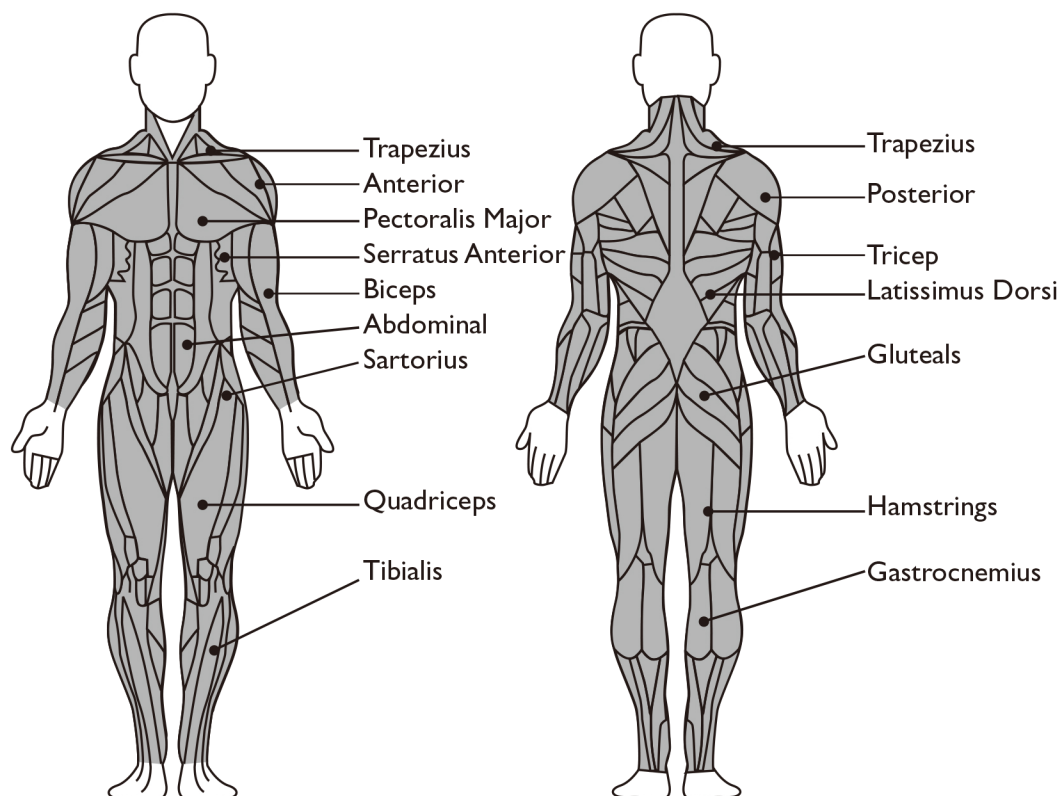

CONDITIONING GUIDELINES

How you begin your exercise program depends on your physical condition. If you have been inactive for several years, or are severely overweight, you must start slowly and increase your time on the equipment, a few minutes per workout.

Initially, you may be able to exercise only for a few minutes in your target zone, however, your aerobic fitness will improve over the next 6 to 8 weeks. Don't be discouraged if it takes longer. It's important to work at your own pace. Ultimately, you'll be able to exercise continuously for 30 minutes. The better your aerobic fitness, the harder you will have to work to stay in your target zone. Please remember these essentials:

- Have your doctor review your training and diet programs to advise you of a workout routine you should adopt.
- Begin your training program slowly with realistic goals that have been set by you and your doctor.
- Monitor your pulse frequently.
- Establish your target heart rate based on your age and condition.


EXERCISE INTENSITY

To maximise the benefits of exercising, it is important to exercise with the proper intensity. The proper intensity level can be found by using your heart rate as a guide. For effective aerobic exercise, your heart rate should be maintained at a level between 65% and 85% of your maximum heart rate as you exercise. This is known as your target zone. You can find your target zone in the table below.

During the first few months of your exercise program, keep your heart rate near the low end of your target zone as you exercise. After a few months, your heart rate can be increased gradually until it is near the middle of your target zone as you exercise.

To measure your heart rate, stop exercising but continue moving your legs or walking around and place 2 fingers on your wrist. Take a 6 second heartbeat count and multiply the results by 10 to find your heart rate. For example, if your 6 second heartbeat count is 14, your heart rate is 140 beats per minute. (A 6 second count is used because your heart rate will drop rapidly when you stop exercising).

Adjust the intensity of your exercise until your heart rate is at the proper level.

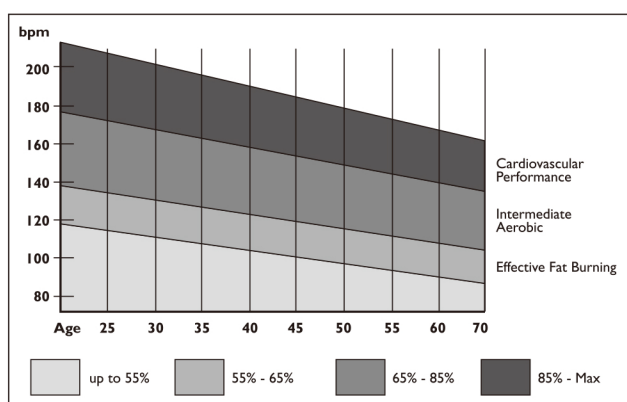

WARM UP & COOL DOWN

WORKOUT GUIDELINES

Each workout should include the following 3 parts:

- 1. A WARM-UP:** 5 to 10 minutes of stretching and light exercise. A proper warm-up increases your body temperature, heart rate, and circulation in preparation for exercise.
- 2. TRAINING ZONE EXERCISE:** 20 to 30 minutes of exercising with your heart rate in your training zone. (Note: During the first few weeks of your exercise program, do not keep your heart rate in your training zone for longer than 20 minutes).
- 3. COOL-DOWN:** 5 to 10 minutes of stretching. This will increase the flexibility of your muscles and will help to prevent post-exercise problems.

EXERCISE FREQUENCY

To maintain or improve your condition, plan 3 workouts each week, with at least 1 day of rest between workouts. After a few months of regular exercise, you may complete up to 5 workouts each week, if desired. Remember, the key to success is to make exercise a regular and enjoyable part of your everyday life.

SUGGESTED STRETCHES

The correct form for several basic stretches are shown on the right. Move slowly as you stretch, hold the position and never bounce.

1. TOE TOUCH STRETCH

Stand with your knees bent slightly and slowly bend forward from your hips. Allow your back and shoulders to relax as you reach down toward your toes as far as possible. Hold for 15 counts, and then relax. Repeat 3 times.

Stretches: Hamstrings, back of knees and back.

2. HAMSTRING STRETCH

Sit with 1 leg extended. Bring the sole of the opposite foot toward you and rest it against the inner thigh of your extended leg. Reach toward your toes as far as possible. Hold for 15 counts, and then relax. Repeat 3 times for each leg.

Stretches: Hamstrings, lower back and groin.

3. CALF/ACHILLES STRETCH

With 1 leg in front of the other, reach forward and place your hands against a wall. Keep your back leg straight and your back foot flat on the floor. Bend your front leg, lean forward and move your hips toward the wall. Hold for 15 counts, and then relax. Repeat 3 times for each leg. To cause further stretching of the Achilles tendons, bend your back leg as well.

Stretches: Calves, Achilles tendons and ankles.

4. QUADRICEPS STRETCH


With 1 hand against a wall for balance, reach back and grasp 1 foot with your other hand. Bring your heel as close to your buttocks as possible. Hold for 15 counts, then relax. Repeat 3 times for each leg.

Stretches: Quadriceps and hip muscles.

5. INNER THIGH STRETCH

Sit with the soles of your feet together and your knees outward. Pull your feet toward your groin area as far as possible. Hold for 15 counts, and then relax. Repeat 3 times.

Stretches: Quadriceps and hip muscles.

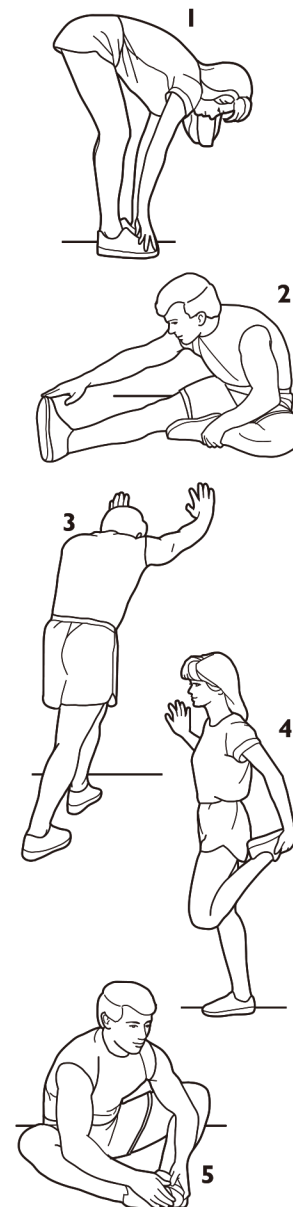

MAINTENANCE

CLEANING

The Trojan Elite Gym 1.0 can be cleaned with a soft cloth and mild detergent. Do not use abrasives or solvents on plastic parts. Please wipe your perspiration off the Trojan Elite Gym 1.0 after each use.

Please inspect all assembly bolts and lock nuts on the machine for proper tightness before use.

STORAGE

Store the Trojan Elite Gym 1.0 in a clean and dry environment away from children.

2 YEAR LIMITED WARRANTY

The Manufacturer hereby provides a warranty to the original purchaser of this product ('the Consumer') that this product will be free of manufacturing defects in materials and workmanship which under normal, personal, family or household use (commercial use expressly excluded) manifest themselves within the 2 years from the date of purchase.

EXCLUSIONS

- The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, commercial use, not in accordance within the written instructions included with the product, abuse and/or any non-authorised modification of the product, incorrect installation of the product or normal wear and tear.
- All demo models carry a 3 month warranty.

WAIVER

The warranty and the obligations of the Manufacturer provided herein are in lieu of, and the Consumer, waives all other warranties, guarantees, conditions or liabilities, express or implied, arising by law or otherwise, including without limitation, any obligation of the Manufacturer in respect of any injury, loss or damage (direct, indirect or consequential) arising out of the use of, or inability to use this product and whether or not occasioned by the Manufacturer's negligence or any act or omission on its part.

PROOF OF PURCHASE

Any claim in terms of the warranty must be supported by a proof of purchase or a warranty number. Warranty numbers can be issued through contacting our Trojan Call Centre on 0861 Trojan (0861 876526) or online at www.trojanhealth.co.za. Customers residing outside South Africa can contact us on +27 10 206 4405. If such proof is not available, then notwithstanding anything to the contrary herein, the service agent's prevailing charges for services/repairs including call out and/or spares will be payable by the Consumer upon collection or delivery of the repaired product.

The Consumer does not need to return the product to the store. The Consumer should call the Trojan Call Centre on 0861 Trojan (0861 876526). Customers residing outside South Africa can contact us on +27 10 206 4405 and the call centre will advise of the procedure. During the warranty period the product may only be serviced and/or repaired by the Manufacturer's duly authorised agent(s).

TROJAN™		ATTACH RECEIPT	
CLIENT DETAILS			
NAME: _____			
EMAIL: _____		CELL: _____	
TEL(H): _____		TEL(W): _____	FAX: _____
ADDRESS: _____			

PRODUCT DETAILS			
DATE OF PURCHASE: dd / mm / yy		SERIAL NUMBER: _____	TILL SLIP NUMBER: _____
DESCRIPTION OF PURCHASE: _____			

BRANCH PURCHASED AT			

0861 TROJAN (0861 876526) / +27 10 206 4405		WWW.TROJANHEALTH.CO.ZA	

REPAIRS PROCEDURE

Should you experience any faults or breakdowns on your Trojan equipment, please adhere to the following procedure to have the fault rectified speedily and professionally.

Do not return the product to the store.

Call the Trojan Call Centre on 0861 Trojan (0861 876526) to log the faulty product (under warranty or out of warranty). Customers residing outside South Africa can contact us on +27 10 206 4405.

The operator or technical advisor will try identify the fault, and will book a service team call out.

The service team will endeavour to fix the problem in your home on an agreed date and time.

Only if the fault cannot be repaired in the convenience of your home, will the service team take the faulty product back to the service centre.

Items repaired in our service centre will be returned to your home on an agreed date and time.

Note: Should you live in an outlying area or outside South Africa, it may be necessary to return the product to the store nearest to you. Our service operator will advise you of your repair procedure.

COST OF REPAIRS

UNDER WARRANTY

Any items still under warranty will be repaired free of charge, as long as it complies with the terms and conditions of the warranty (refer to “warranties” section in this manual). Any items that need to be repaired that are NOT covered in the warranty will be for the Consumer’s expense. A quote for the repair/replacement of these items will be provided to the Consumer for approval prior to repairs being conducted.

OUT OF WARRANTY

Any items that need to be repaired once the warranty has expired will be for the Consumer’s expense including call out fees.

A quote for the repair/replacement of these items will be provided to the Consumer for approval prior to repairs being conducted.

2 YEAR WARRANTY

If this product proves to be faulty during normal use due to defective materials or workmanship. Refer to our website for terms and conditions.



0861 876 526
0861 TROJAN
+27 10 206 4405

Please call us for any product queries, after sales support, repairs or installations.

Manufactured for Masstores (Pty) Ltd.
16 Peltier Drive, Sunninghill, Ext 6, Sandton, 2146, South Africa

MADE IN CHINA

Always consult a physician before starting a new exercise routine

Use in conjunction with a healthy eating plan

Only use product for its intended purpose to prevent injury

#20M06T007.1