



TROJAN™

POWERTOWER 200


BACK AND ARM
SUPPORT PADS

PULL-UP
BAR

STRENGTH
& TONING



USER MANUAL

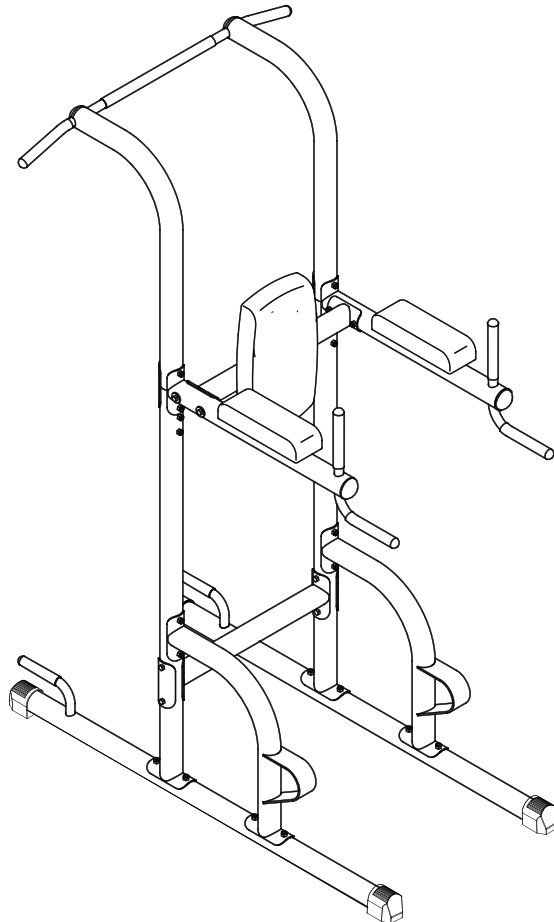

CAUTION

READ ALL PRECAUTIONS AND
INSTRUCTIONS IN THIS MANUAL
BEFORE USING THIS EQUIPMENT.
KEEP THIS MANUAL FOR
FUTURE REFERENCE.

Visit facebook.com/trojanhealth
www.trojanhealth.co.za



Like us on
facebook



INDEX

- **Important Safety Instructions** _____ 3
- **Pre Assembly Check List** _____ 5
- **Hardware & Tools List** _____ 6
- **Parts List** _____ 7
- **Exploded Drawing** _____ 8
- **Assembly Steps** _____ 9
- **Maintenance** _____ 15
- **Fitness Tips & Techniques** _____ 16
- **Warm Up & Cool Down** _____ 17
- **2 Year Limited Warranty** _____ 18
- **Repairs Procedure** _____ 19

IMPORTANT SAFETY INSTRUCTIONS

It is the sole responsibility of the purchaser of Trojan products to read the owner's manual, warning labels and instruct all individuals, on proper usage of the equipment. Understanding each and every warning to the fullest is important. If any of these instructions or warnings are unclear please contact Trojan Customer Services on **0861 TROJAN (0861 876526)**, within the Republic of South Africa. Customers residing outside South Africa can contact us on +27 10 206 4405.

The equipment is only intended for home use and is not intended for commercial, institutional and/or studio facilities use.

Contact Trojan with any questions regarding this classification. It is recommended that all users of Trojan be informed of the following information prior to use.



HEALTH WARNING

- Before starting any exercise or conditioning program you should consult with your personal physician to see if you require a complete physical exam. This is especially important if you are inactive, pregnant or suffer from any illness.
- If at any time during exercise you feel faint, dizzy or experience pain, stop exercising immediately and consult your physician.
- To avoid muscular pain and strain, begin each workout by stretching and warming up and end each session by cooling down and stretching.



INSTALLATION

Trojan recommends that all equipment:

- Be secured to or set up on a solid, level surface to stabilise and eliminate rocking or tipping over during training.
- Be set up inside your home away from moisture and dust (the equipment is not designed for outdoor use).
- Be set up with sufficient ventilation to ensure proper operation.
- Be set up with sufficient space around the equipment so that all exercises can be completed safely. It is recommended that there should be at least 1 m of space around the equipment where access is required to exercise.



PROPER USAGE

- Do not use the equipment in any way other than as designed or intended by the manufacturer. It is imperative that Trojan equipment is used properly to avoid injury.
- Injuries may result from exercising improperly or excessively.
- Your Trojan equipment should only be used by one person at a time.
- Be careful to maintain your balance while using, mounting, dismounting or assembling your Trojan equipment to avoid injury.
- Servicing other than the procedures in this manual should be performed by an authorised service representative only.

IMPORTANT SAFETY INSTRUCTIONS



ACCESS CONTROL

- Trojan recommends that all fitness equipment be used in a supervised area. It is recommended that the equipment be located in an access controlled area. Control is the responsibility of the owner. Keep children away from all equipment.
- Parents or others supervising adults must provide close supervision of children if the equipment is used in the presence of children.



INSPECTION

- Do not use or permit use of any equipment that is damaged, or has worn or broken parts. For all Trojan equipment use only replacement parts supplied by Trojan.
- Always make sure that all nuts and bolts are tightened prior to each use.
- Maintain labels and nameplates – do not remove labels for any reason. They contain important information.
- Equipment maintenance – preventative maintenance is the key to smooth operating equipment. Please ensure that you follow our maintenance tips to ensure the continued correct function of your Trojan equipment.
- Before any use, examine all accessories approved for use with the Trojan equipment for damage or wear. Should your Trojan equipment appear damaged or worn, do not attempt to use or repair the equipment yourself.
- Please contact our service department on **0861 TROJAN (0861 876526)** to arrange a repair. Customers residing outside South Africa can contact us on +27 10 206 4405.



OPERATING WARNINGS

- It is the purchaser's responsibility to instruct all users as to the proper operating procedures of all Trojan equipment.
- Keep children away from all moving parts. Parents must provide close supervision of children if the equipment is used in the presence of children.
- Do not wear loose fitting clothing or jewellery when using the equipment. It is also recommended that users tie up long hair to avoid contact with moving parts.
- Ensure that anyone not using the equipment stays clear of the user, accessories and moving parts while the machine is in operation.



USER WEIGHT LIMITATIONS

- This Trojan Power Tower 200 may not be used by persons weighing more than 120 kg.

SAVE THIS INSTRUCTION MANUAL FOR FUTURE USE AND REFERENCE.

If any of these instructions or warnings are unclear please contact Trojan Customer Services on


0861 TROJAN (0861 876526) within the Republic of South Africa or **visit www.trojanhealth.co.za**.

Customers residing outside South Africa can contact us on +27 10 206 4405.

PRE ASSEMBLY CHECK LIST

Thank you for choosing the Trojan Power Tower 200. We take great pride in producing this product and hope it will provide many hours of quality exercise to make you feel better, look better and enjoy life to its fullest. Yes, it's a proven fact that a regular exercise program can improve your physical and mental health. Too often, our busy lifestyles limit our time and opportunity to exercise. The Trojan Power Tower 200 provides a convenient and simple method to begin your assault on getting your body in shape and achieving a healthier lifestyle. Before reading further, please review the drawing below and familiarise yourself with the parts that are labelled.

Read this manual carefully before using the Trojan Power Tower 200.

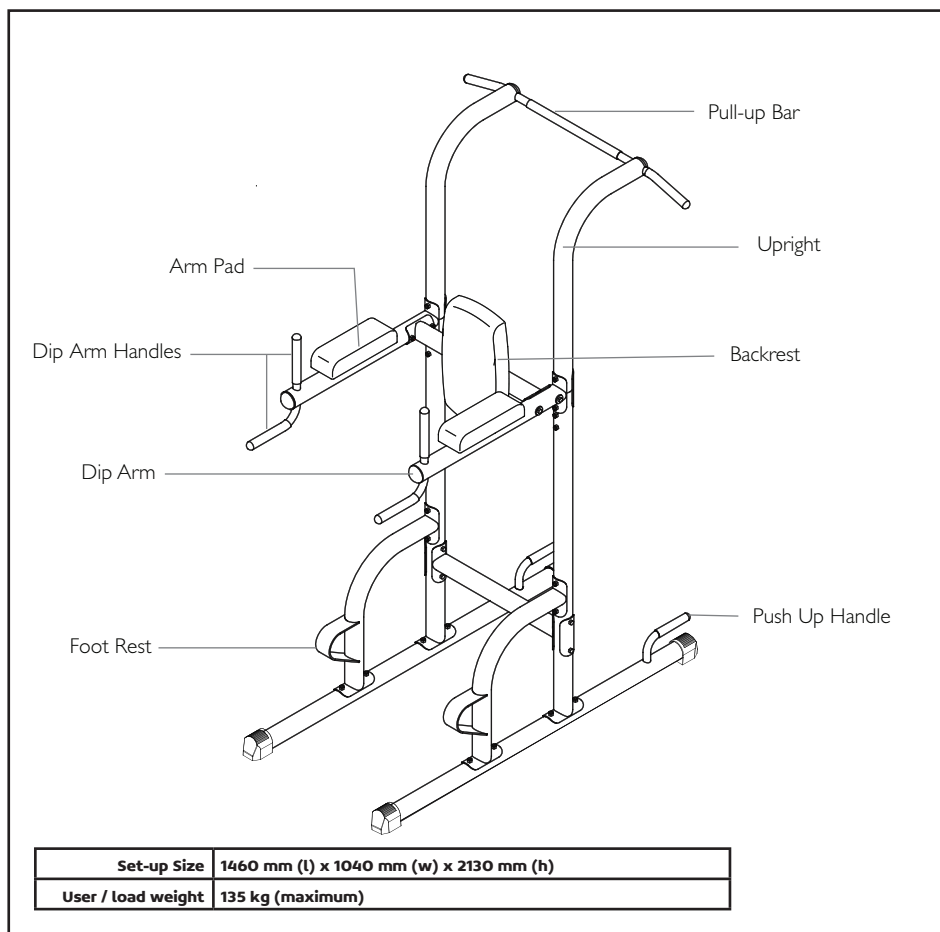

HARDWARE & TOOLS LIST

INSTRUCTIONS FOR ASSEMBLY

- Before you start to assemble, please check the hardware packaging to make sure all parts are included.
- Basic tools, such as spanners will be provided for assembly.



M8 Locknut (22)




M6 Curved Washer (21)



M8 Curved Washer (23)



M10 Curved Washer (26)




M6 x 16mm Screw (15)



M10 x 45mm Screw (19)




M8 x 70mm Bolt (24)




M8 x 70mm Carriage Bolt (20)



M6 x 75mm Screw (18)



M8 x 75mm Bolt (17)




M8 x 80mm Bolt (27)

PARTS LIST

No.	Description	Qty
1	Base	2
2	Upright	2
3	Pull-up Frame	2
4	Footrest Frame	2
5	Dip Arm	2
6	Arm Pad	2
7	Top Crossbar	1
8	Backrest	1
9	Pull-up Bar	1
10	Bottom Crossbar	1
11	Short Grip	8
12	Rubber Cap	6
13	Support Plate	4
14	25mm Inner Cap	8
15	M6 x 16mm Screw	4
16	60mm Outer Cap	4
17	M8 x 75mm Bolt	12
18	M6 x 75mm Screw	4
19	M10 x 45mm Screw	2
20	M8 x 70mm Carriage Bolt	8
21	M6 Curved Washer	4
22	M8 Locknut	28
23	M8 Curved Washer	12
24	M8 x 70mm Bolt	4
25	Long Grip	1
26	M10 Curved Washer	2
27	M8 x 80mm Bolt	4

EXPLODED DRAWING

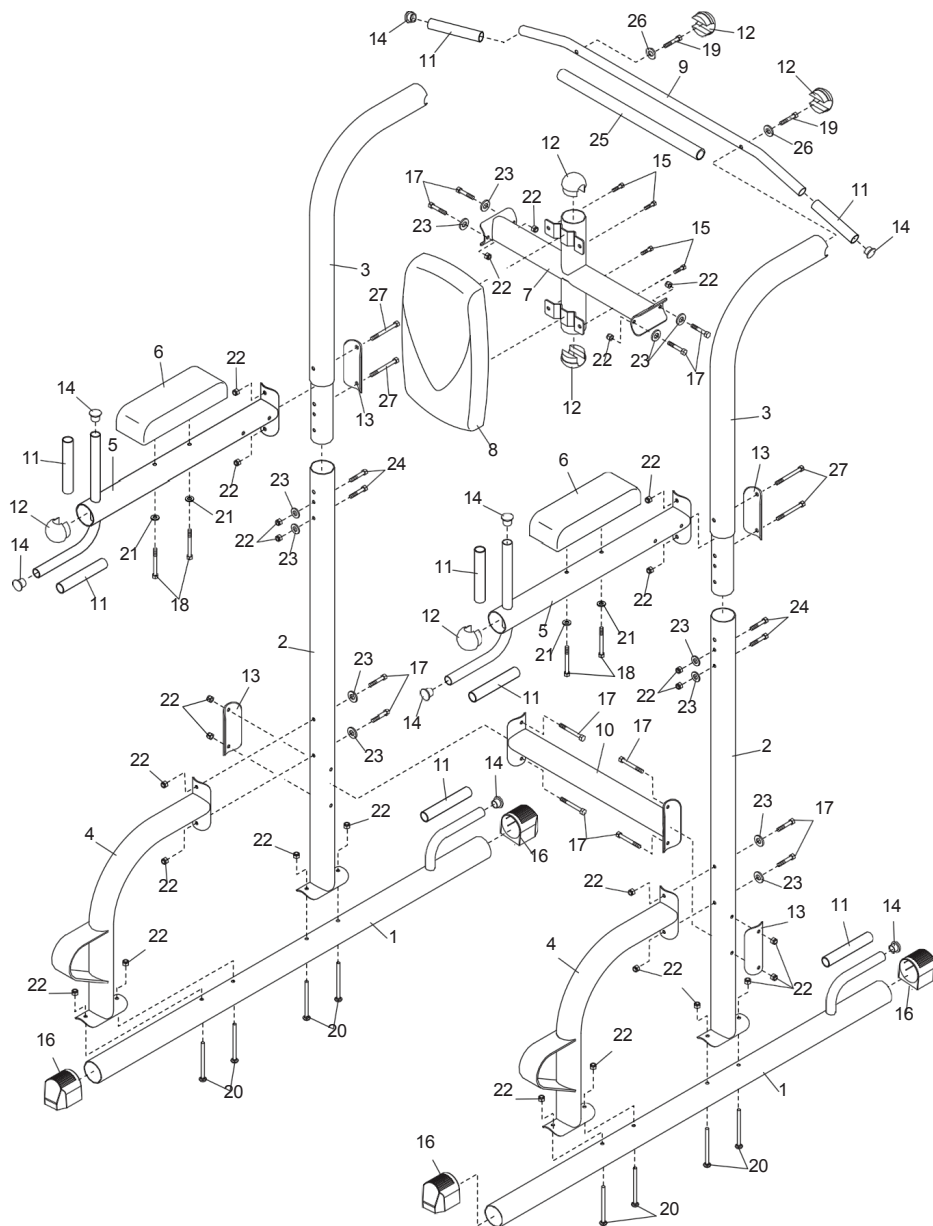


ASSEMBLY STEPS

1. PREPARATION

- Before assembling make sure that you will have enough space around the item.
- Use the supplied parts and hardware for the assembly.
- Before assembling please check whether all the required parts have been supplied as per the parts list

STEP 1

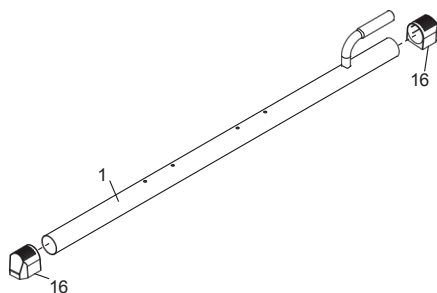


STEP 1:

Attach two 60mm Outer Caps (16) to the Base (1).

Repeat this step with the other Base (not shown).

STEP 2

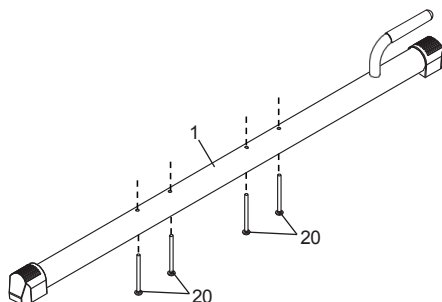


STEP 2:

Insert 4 x M8 x 70mm Carriage Bolts (20) upward through the Base (1). **Tip: it may be helpful to place tape on the heads of the Carriage Bolts to hold them in place until later steps.**

Repeat this step with the other Base (not shown).

ASSEMBLY STEPS

STEP 3

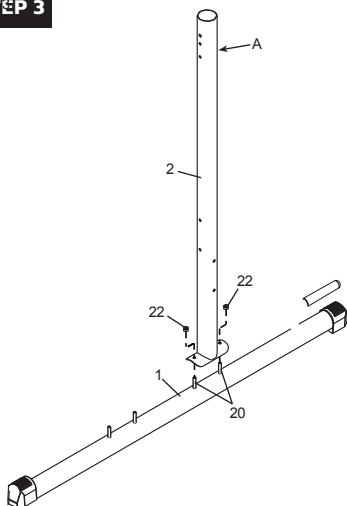


STEP 3:

Orient one of the Uprights (2) and one of the Bases (1) as shown; **make sure that the hexagonal holes (A) are on the indicated side of the Upright.**

Attach the Upright (2) to the Base (1) with the two indicated M8 x 70mm Carriage Bolts (20) and two M8 Locknuts (22); **do not tighten the Locknuts yet.**

Attach the other Upright (not shown) to the other Base (not shown) in the same way.

STEP 4

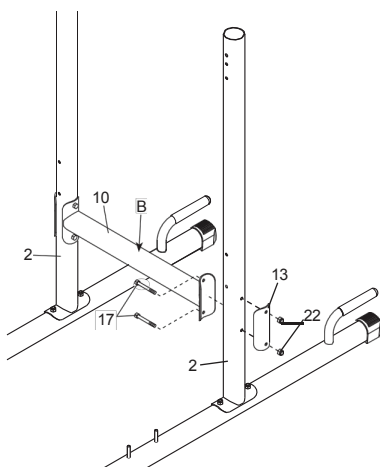

STEP 4:


Orient the Bottom Crossbar (10) so that the warning decal (B) is on top.

Attach the Bottom Crossbar (10) to one of the Uprights (2) with two M8 x 75mm Bolts (17), a Support Plate (13), and two M8 Locknuts (22); **do not tighten the Locknuts yet.**

Attach the Bottom Crossbar (10) to the other Upright (2) in the same way.

ASSEMBLY STEPS

STEP 5

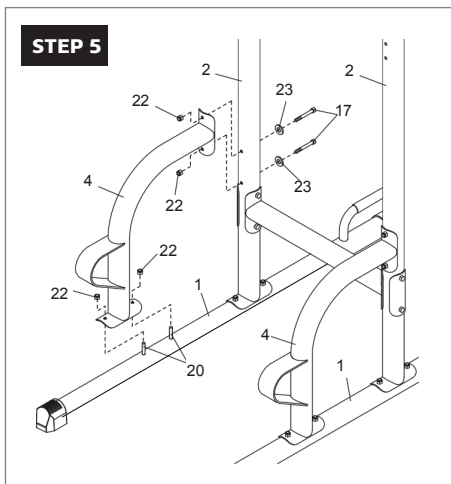


STEP 5:

Attach a Footrest Frame (4) to one of the Bases (1) with the two indicated M8 x 70mm Carriage Bolts (20) and two M8 Locknuts (22); **do not tighten the Locknuts yet.**

Next, attach the Footrest Frame (4) to the Upright (2) with two M8 x 75mm Bolts (17), two M8 Curved Washers (23), and two M8 Locknuts (22); **do not tighten the Locknuts yet.**

Attach the other Footrest Frame (4) to the other Base (1) and the other Upright (2) in the same way.

STEP 6

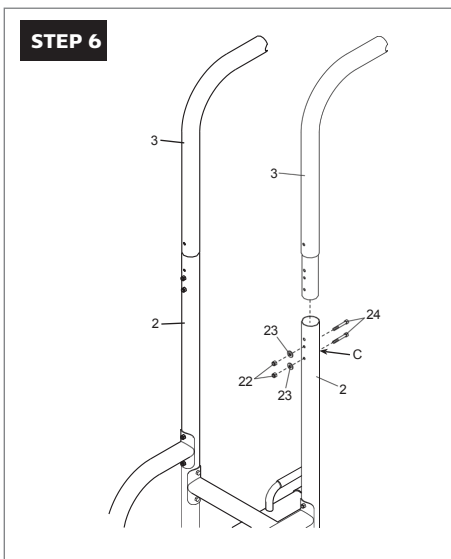

STEP 6:


Orient one of the Pull-up Frames (3) as shown, and insert it into one of the Uprights (2).

Attach the Pull-up Frame (3) with two M8 x 70mm Bolts (24), two M8 Curved Washers (23), and two M8 Locknuts (22). **The Bolts must be inserted into the lowest set of holes in the Pull-up Frame and the Upright. Make sure that the bolt heads are in the hexagonal holes (C) in the Upright. Do not tighten the Locknuts yet.**

Attach the other Pull-up Frame (3) to the other Upright (2) in the same way.

ASSEMBLY STEPS

STEP 7

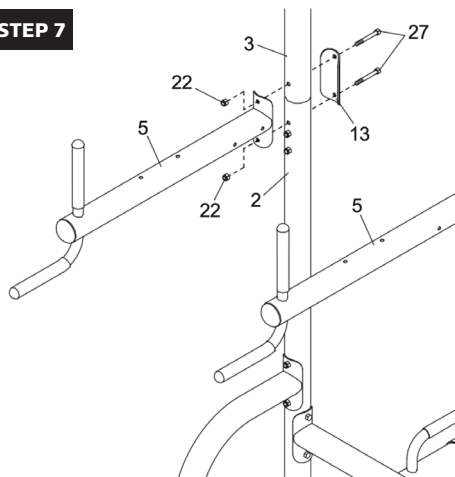


STEP 7:

Attach the Dip Arm (5) to one of the Pull-up Frames (3) and one of the Uprights (2) with two M8 x 80mm Bolts (27), a Support Plate (13), and two M8 Locknuts (22); **do not tighten the Locknuts yet.**

Repeat this step with the other Dip Arm (5).

STEP 8

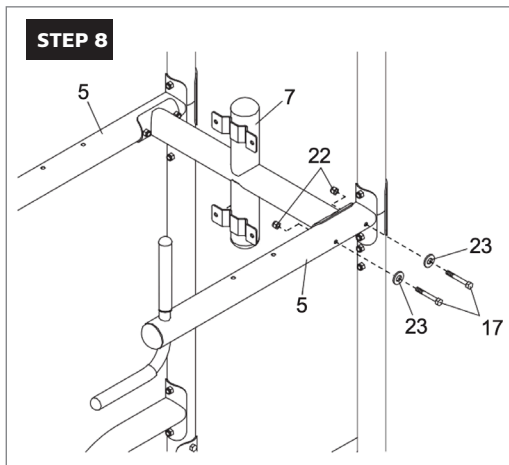


STEP 8:

Orient the Top Crossbar (7) as shown and attach it to one of the Dip Arms (5) with two M8 x 75mm Bolts (17), two M8 Curved Washers (23), and two M8 Locknuts (22); **do not tighten the Locknuts yet.**

Attach the Top Crossbar (7) to the other Dip Arm (5) in the same way.

ASSEMBLY STEPS

STEP 9

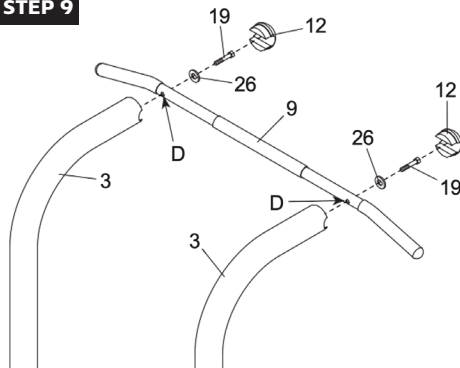


STEP 9:

Orient the Pull-up Bar (9) so that the indented holes (D) are on the side shown. Attach the Pull-up Bar to the Pull-up Frames (3) with two M10 x 45mm Screws (19) and two M10 Curved Washers (26). Then, press the two Rubber Caps (12) into the ends of the Pull-up Frames.

See steps 3-8. Tighten all the M8 Locknuts (22).


STEP 10

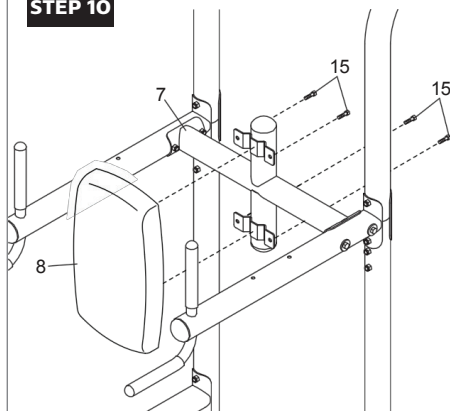

STEP 10:

Orient the Backrest (8) as shown. Attach the Backrest to the Top Crossbar (7) with four M6 x 16mm Screws (15)

ASSEMBLY STEPS

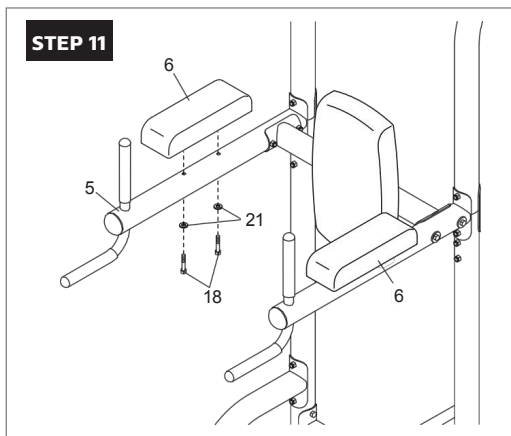

STEP 11

STEP 11:

Attach an Arm Pad (6) to one of the Dip Arms (5) with two M6 x 75mm Screws (18) and two M6 Curved Washers (21).

Repeat this step with the other Arm Pad (6).

STEP 12:

Make sure that all parts have been properly tightened before the exercise rack is used.



MAINTENANCE

CLEANING

The Trojan Power Tower 200 can be cleaned with a soft cloth and mild detergent. Do not use abrasives or solvents on plastic parts. Please wipe your perspiration off the Trojan Power Tower 200 after each use.

STORAGE

Keep the Trojan Power Tower 200 in a clean and dry environment away from children.

FITNESS TIPS & TECHNIQUES

AEROBIC EXERCISE

Aerobic exercise is any sustained activity that sends oxygen to your muscles via your heart and lungs. Aerobic exercise improves the fitness of your lungs and heart – your body's most important muscle. Aerobic exercise fitness is promoted by any activity that uses your large muscles (arms, legs, or buttock, for example). Your heart beats quickly and you breathe deeply. An aerobic exercise should form part of your entire exercise routine.


WEIGHT TRAINING

Along with aerobic exercising which helps get rid of and keep off the excess fat that our bodies can store, weight training is an essential part of the exercise routine process. Weight training helps tone, build and strengthen muscle. If you are working above your target zone, you may want to do a lesser amount of reps. Always consult your physician before beginning any exercise program.

MUSCLE CHART

TROJAN POWER TOWER

The exercise routine that is performed on the Trojan Power Tower 200 will develop the whole body as well as condition the circulatory system and provide a good aerobic workout. These muscle groups are highlighted on the muscle chart below.

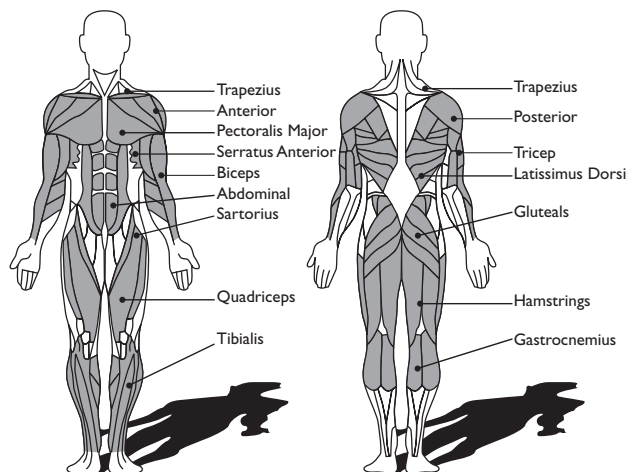

VISIT:

www.trojanhealth.co.za for equipment choices and exercise programs

WARM UP & COOL DOWN

WORKOUT GUIDELINES CLEANING

Each workout should include the following three parts:

- 1. A WARM-UP:** 5 to 10 minutes of stretching and light exercise. A proper warm-up increases your body temperature, heart rate, and circulation in preparation for exercise.
- 2. TRAINING ZONE EXERCISE:** 20 to 30 minutes of exercising with your heart rate in your training zone. (Note: During the first few weeks of your exercise program, do not keep your heart rate in your training zone for longer than 20 minutes).
- 3. COOL-DOWN:** 5 to 10 minutes of stretching. This will increase the flexibility of your muscles and will help to prevent post-exercise problems.

EXERCISE FREQUENCY

To maintain or improve your condition, plan three workouts each week, with at least one day of rest between workouts. After a few months of regular exercise, you may complete up to five workouts each week, if desired. Remember, the key to success is to make exercise a regular and enjoyable part of your everyday life.

SUGGESTED STRETCHES

The correct form for several basic stretches is shown at the right. Move slowly as you stretch, hold the position and never bounce.

1. TOE TOUCH STRETCH

Stand with your knees bent slightly and slowly bend forward from your hips. Allow your back and shoulders to relax as you reach down toward your toes as far as possible. Hold for 15 counts, and then relax. Repeat 3 times.

Stretches: Hamstrings, back of knees and back.

2. HAMSTRING STRETCH

Sit with one leg extended. Bring the sole of the opposite foot toward you and rest it against the inner thigh of your extended leg. Reach toward your toes as far as possible. Hold for 15 counts, and then relax. Repeat 3 times for each leg.

Stretches: Hamstrings, lower back and groin.

3. CALF/ACHILLES STRETCH

With one leg in front of the other, reach forward and place your hands against a wall. Keep your back leg straight and your back foot flat on the floor. Bend your front leg, lean forward and move your hips toward the wall. Hold for 15 counts, and then relax. Repeat 3 times for each leg. To cause further stretching of the Achilles tendons, bend your back leg as well.

Stretches: Calves, Achilles tendons and ankles.

4. QUADRICEPS STRETCH

With one hand against a wall for balance, reach back and grasp one foot with your other hand. Bring your heel as close to your buttocks as possible. Hold for 15 counts, then relax. Repeat 3 times for each leg.

Stretches: Quadriceps and hip muscles.

5. INNER THIGH STRETCH

Sit with the soles of your feet together and your knees outward. Pull your feet toward your groin area as far as possible. Hold for 15 counts, and then relax. Repeat 3 times.

Stretches: Quadriceps and hip muscles.



2 YEAR LIMITED WARRANTY

The Manufacturer hereby provides a warranty to the original purchaser of this product ('the Consumer') that this product will be free of manufacturing defects in materials and workmanship which under normal, personal, family or household use (commercial use expressly excluded) manifest themselves within the 2 years from the date of purchase.

EXCLUSIONS

- The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, commercial use, not in accordance within the written instructions included with the product, abuse and/or any non-authorised modification of the product, incorrect installation of the product or normal wear and tear.
- All demo models carry a 3 month warranty.

WAIVER

The warranty and the obligations of the Manufacturer provided herein are in lieu of, and the consumer, waives all other warranties, guarantees, conditions or liabilities, express or implied, arising by law or otherwise, including without limitation, any obligation of the manufacturer in respect of any injury, loss or damage (direct, indirect or consequential) arising out of the use of, or inability to use this product and whether or not occasioned by the manufacturer's negligence or any act or omission on its part.

PROOF OF PURCHASE

Any claim in terms of the warranty must be supported by a proof of purchase or a warranty number. Warranty numbers can be issued through contacting our Trojan Call Centre on 0861 Trojan (0861 876526) or online at www.trojanhealth.co.za. Customers residing outside South Africa can contact us on +27 10 206 4405. If such proof is not available, then notwithstanding anything to the contrary herein, the service agent's prevailing charges for services/repairs including call out and/or spares will be payable by the Consumer upon collection or delivery of the repaired product.

The Consumer does not need to return the product to the store. The Consumer should call the Trojan Call Centre on 0861 Trojan (0861 876526). Customers residing outside South Africa can contact us on +27 10 206 4405 and the call centre will advise of the procedure. During the warranty period the product may only be serviced and/or repaired by the Manufacturer's duly authorised agent(s).

TROJAN		ATTACH RECEIPT
CLIENT DETAILS		
NAME: _____		
EMAIL: _____		CELL: _____
TEL(H): _____	TEL(W): _____	FAX: _____
ADDRESS: _____		
PRODUCT DETAILS		
DATE OF PURCHASE: dd / mm / yy		SERIAL NUMBER: _____
DESCRIPTION OF PURCHASE: _____		TILL SLIP NUMBER: _____
BRANCH PURCHASED AT		
0861 TROJAN (0861 876526) / +27 10 206 4405		WWW.TROJANHEALTH.CO.ZA

REPAIRS PROCEDURE

Should you experience any faults or breakdowns on your Trojan equipment, please adhere to the following procedure to have the fault rectified speedily and professionally.

Do not return the product to the store.

Call the Trojan Call Centre on 0861 Trojan (0861 876526) to log the faulty product (under warranty or out of warranty). Customers residing outside South Africa can contact us on +27 10 206 4405.

The operator or technical advisor will try identify the fault, and will book a service team call out.

The service team will endeavour to fix the problem in your home on an agreed date and time.

Only if the fault cannot be repaired in the convenience of your home, will the service team take the faulty product back to the service centre.

Items repaired in our service centre will be returned to your home on an agreed date and time.

Note: Should you live in an outlying area or outside South Africa, it may be necessary to return the product to the store nearest to you. Our service operator will advise you of your repair procedure.

COST OF REPAIRS

UNDER WARRANTY

Any items still under warranty will be repaired free of charge, as long as it complies with the terms and conditions of the warranty (refer to “warranties” section in this manual). Any items that need to be repaired that are NOT covered in the warranty will be for the consumer’s expense. A quote for the repair/replacement of these items will be provided to the consumer for approval prior to repairs being conducted.

OUT OF WARRANTY

Any items that need to be repaired once the warranty has expired will be for the consumer’s expense including call out fees.

A quote for the repair/replacement of these items will be provided to the consumer for approval prior to repairs being conducted.

2 YEAR WARRANTY

If this product proves to be faulty during normal use due to defective materials or workmanship. Refer to user manual or website for terms and conditions.

0861 876 526
0861 TROJAN
+27 10 206 4405

Please call us for any product queries, after sales support, repairs or installations.

Manufactured for Masstores (Pty) Ltd.
16 Peltier Drive, Sunninghill, Ext 6, Sandton, 2146, South Africa.

MADE IN CHINA

Always consult a physician before starting a new exercise routine

Use in conjunction with a healthy eating plan

Only use product for its intended purpose to prevent injury

Visit facebook.com/trojanhealth
www.trojanhealth.co.za

Like us on
facebook

#18M11T006